 


# NINE WEST

WATCH INSTRUCTIONS & LIFETIME LIMITED WARRANTY

## ANALOG

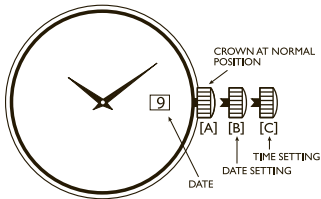

## SETTING THE TIME

Pull out Crown all the way until it stops (position 'C'). The second hand will stop. Rotate the Crown in either direction until desired time is obtained. Push Crown back in all the way (position 'A') to re-engage time keeping. Second hand will begin to move.

NOTE: Never pull the Crown when the watch is wet.

## SETTING THE TIME, DAY AND DATE

If your watch has a DATE or a DAY and DATE Window, pull the Crown out to position 'B' and turn the Crown in both directions until the DATE showing is the day before the desired DATE. Pull out Crown all the way (position 'C') and turn the Crown to advance time. When midnight is reached, the DATE will advance to the desired DATE. Continue to turn the Crown until desired time is obtained. Push the Crown back in all the way until it stops (position 'A') to re-engage time keeping.



BUTTON A - LIGHT  
BUTTON B - MODE  
BUTTON C - START

## HOW TO SET THE TIME

- In normal time display, press button "B" three times
- The seconds will flash
- Press button "C", the reset second to zero
- Press button "A", hour digits will flash
- Press button "C", to adjust
- Press button "A", minute digits will flash
- Press button "C", to adjust
- Press button "A", month will flash
- Press button "C", to adjust
- Press button "A", date will flash
- Press button "C", to adjust
- Press button "A", day will flash
- Press button "C", to adjust
- Press button "B", to confirm and accept changes.
- Press button "C", to switch between normal and 24hr mode

## HOW TO SET THE ALARM

- In normal time press button “B” once to enter alarm mode
- Press button “A”, hour digits flashing
- Press button “C”, to adjust
- Press button “A”, minute flashing
- Press button “C”, to adjust
- Press button “B”, to accept changes and return to normal time and alarm set

## ALARM AND CHIME

- To switch ON/OFF alarm:
- In alarm mode press button “C”, to turn alarm and chime on/off. Alarm on
  - “🔔” displayed chime on
  - “▣▣▣” displayed
- Press button “B”, and return to normal time and display

## HOW TO USE STOP WATCH

- In normal time press button “B”, twice to enter chronograph mode
- Press button “C”, to start and top
- Press button “A”, to reset

## HOW TO USE LIGHT

- In any mode press button “A”

## LAP TIME OPERATION

- When time is running press button “A”, to measure lap
- Press button “A”, again to return to the count
- Press button “C”, to stop the time at the end of the event
- Press button “A”, to reset
- Press button “B”, to return to normal time

## SLIDING CLASP TYPE

### Opening the clasp

- Using a screwdriver and/or a pair of tweezers, simply pry open (up) the locking grip for adjustment (Fig. 1) and slide the clasp (up and down) to the desired length of adjustment.

 
### Closing the clasp

- Press down (close) the locking grip of the clasp unit.




## DIAGRAMS FOR ADJUSTABLE BRACELET WATCHES

### 1. CLASP EXTENDER




### 2. ONE SCREW SYSTEM

 




## 5. METAL INSERT

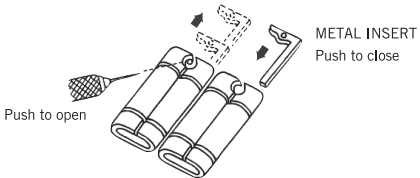 

## 6. HAIRCLIP PIN

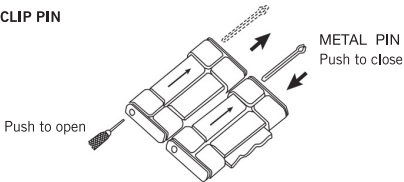 

Turn over the watch to look for arrows on the underside of the links, showing you which way you need to push the pin out of the link. Use a pin remover tool to push out the "Hair Clip Pin" from the hole located on the side of the link. After the links are removed, simply follow these steps in reverse to re-assemble the bracelet.


## 7. PIN & TUBE 1



 Side view "B" of Link




Side view "A" of Link

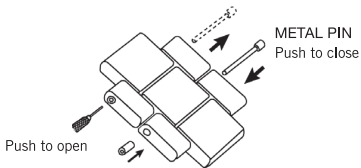

Check the side edge of the watch link to determine which side of the link is "A" or "B". Take a pin remover tool and push out the pin from the hole located on side "B". After the desired links are removed, simply follow these steps in reverse to re-assemble the bracelet.



## 8. PIN & TUBE 2

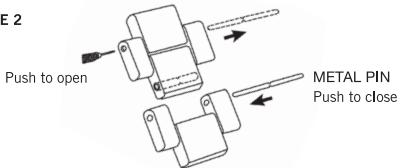 

In order to adjust links for this watch construction, you must switch the pin on the tool kit to the longest pin (approximately 10mm long) found under the tool kit. Then use the pin remover tool to push out the pins from either side of the links. After the desired links are removed, simply follow these steps in reverse to re-assemble the bracelet.


## 9. SLIDING BAR

  TOP OF BAND




BOTTOM  
OF BAND

 Slide along for adjustment  
(push down when done)




Align protruded line inside the  
sliding part with desired groove  
in band

## 10. FOLD-OVER BUCKLE


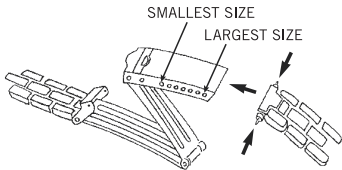 


Compress the push pin, and put the ends into the suitable holes along the buckle.

## MESH BAND ADJUSTMENT

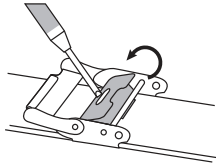 

  1. Place the tip of a small screwdriver or adjustment tool into the slot on the clasp. Gently exert pressure down on the screwdriver and pry the top portion of the clasp open.

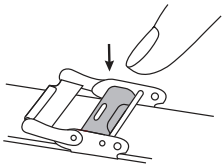


2. Slide the clasp up or down the mesh strap to adjust the band for the size of your wrist. When the proper fit for your wrist has been obtained, align the back of the clasp with the corresponding groove in the mesh watch strap.
3. Press the slotted clasp back down to securely close it.




### 3. TWO SCREW SYSTEM

 Screw in one at a time.

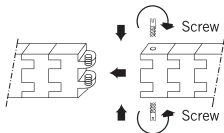

### 4. CONNECTION SYSTEM

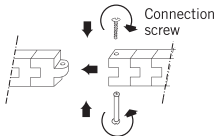 

Use 2 screwdrivers. Hold one side steady before turning the screw.

## WATER RESISTANCE

If your watch is water resistant, the watch is tested to be water resistant to 3-5 atmospheres (100-165 feet).

NOTE: Over time, the gaskets of the case may become worn and reduce the water resistance of the watch. A trained specialist should change the gaskets and the O-ring each time the battery is changed. To avoid any unwanted condensation, watches of all specifications (water resistant or not) should not be exposed to extreme temperatures such as cold or heat.

## CHANGING THE BATTERY

Replace batteries when the watch becomes slow or does not operate, the readout darkens or does not appear or the backlight fails. Replace with same or equivalent.

NOTE: Battery change should be performed by a qualified technician who should also check the condition of the gaskets at the same time.

**BATTERIES ARE NOT COVERED UNDER WARRANTY.**

## DEAR CUSTOMER:

Help your watch/jewelry retailer protect our environment by properly recycling the button cell battery in your watch. Professional jewelers and watch retailers are best equipped to replace the battery in your watch without damage to the watch case and movement inside. They have the specialized tools and experience to do the job right. Inexperienced people can scar the case and damage the water resistant seal – voiding your warranty. It is important to recycle your watch battery in an environmentally safe way. Watch batteries contain very small amounts of mercury, which is required to prevent corrosion of the battery and damage to your watch. There is no danger to you or your watch from the mercury because it is in the sealed battery. But you need to recycle your watch battery properly. Your professional watch/jewelry retailer is the best person to do this for you. These professionals collect used batteries and recycle them through licensed waste management companies.

Do our environment and your watch a favor. Ask your watch/jewelry professional to replace your battery when it expires.

**NOTE : YOUR WATCH CANNOT BE RETURNED TO THE PLACE OF PURCHASE.**

Carefully pack your watch in a sturdy box (do not send in a gift box for same will not be returned) and mail to the nearest approved authorized service station.

Because of possible loss, we recommend that you insure your watch, return receipt requested, when using the mail. If you do not receive a receipt within a reasonable time, start a tracer through the originating post office. Never include a special watch band or any other article of personal value in your shipment.

**USE OUR NATIONWIDE SERVICE CENTERS.  
YOU CANNOT RETURN WATCH FOR SERVICE  
WHERE IT WAS PURCHASED.**

If your watch requires cleaning, lubrication, battery changing, or needs a crystal replaced, NINE WEST WATCH approved Service Centers are available in your area. These repair facilities use NINE WEST WATCH parts and components to assure quality and future performance. Free estimates are available in advance, should you need servicing or repairs not covered under the warranty. Repairs covered under the warranty may require proof of purchase, so retain the purchase receipt.

**TO RETURN YOUR WATCH FOR SERVICING:**

Please call (718) 482-4195 or email [servicedept@egluck.com](mailto:servicedept@egluck.com) for a listing of all approved and authorized stations and locations.

## LIMITED WARRANTY

This NINE WEST WATCH is warranted to you, the owner, for your lifetime against all defects in material or workmanship. This warranty does not apply to normal wear and tear or abuse and excludes batteries, case, strap, crystal, or bracelet. In the event of a defect or malfunction of the movement within this period it will be repaired or replaced, at our option, provided that it is returned prepaid with a check or money order for \$9.95 to cover the cost of handling and return postage. This charge does not apply to California residents. (This is not a repair charge.) DO NOT SEND CASH. No additional charge will be made unless additional servicing is necessary for reasons beyond our control such as accident, misuse, neglect or replacement of parts not warranted is required such as case, crystal, strap, bracelet or batteries in which event a moderate charge will be made. The movement of any timepiece requires periodic cleaning/timing which is not a defect and, as such not warranted. After one year from the date of purchase each cleaning/timing will be performed as required without charging a fee in excess of the specified \$9.95 handling charge. The above remedy is exclusive. NINE WEST WATCH shall not be liable for

any incidental or consequential damages. Should any other part of your watch require repair, please use our Service Center for quick and inexpensive repairs on your watch. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. In the event of a problem with warranty service or performance, you may be able to go to Small Claims Court, a State Court or a Federal District Court.

\* SPECIFICATIONS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE FOR PRODUCT IMPROVEMENT, DESIGN MAY VARY DEPENDING ON THE MODEL.



NOTES:



NOTES:

© 2021 E. GLUCK CORPORATION