

J O S E P H



 
A B B O U D[®]

WATCH INSTRUCTIONS & 1 YEAR LIMITED WARRANTY

SETTING THE WATCH:

These instructions apply to a variety of watch styles. To change the Time, Day or Date on your analog watch, simply follow the accompanying instructions, according to your specific style.

- A. **NEUTRAL POSITION:** This is the normal operating position of the watch in which the Crown is free to turn in either direction without any effect on the time.
- B. **POSITION TO SET THE DATE**
(if your watch has a Date window)
- C. **POSITION TO SET THE TIME**

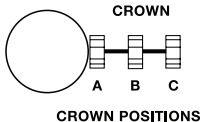


SETTING THE TIME ON STANDARD ANALOG WATCH STYLES:

NOTE: The “standard” style has no Calendar or Day/Date “windows” on the dial, and unlike the above diagram, has only 2 Crown positions - Closed (**'A'**) and Open (**'C'**).

To change the time, simply pull out the Crown all the way until it stops (position **'C'**). Rotate the Crown in either direction until the desired time is obtained. Push the Crown back in all the way (position **'A'**) to re-engage time keeping. (The Second hand will begin to move, if your watch has a second hand).

 
1L45, VD78

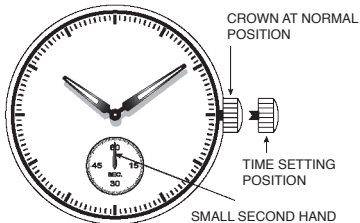

SETTING THE TIME

1. Pull the crown out to the time setting position.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position, second hand begins to run.

 NOTE: Never pull the Crown when the watch is wet.

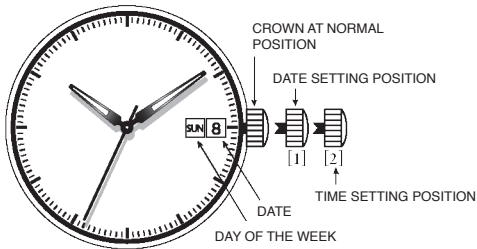

*NOTE: *Date & Day of the week position may be located at different position depends on models. Day of the week may not be available.*

SETTING THE TIME

1. Pull the crown out to the **2nd** position.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position, second hand begins to run.

NOTE: Never pull the Crown when the watch is wet.

SETTING THE DATE

1. Pull the crown out to the **1st** position.
2. Turn the crown counter-clockwise to set the date.
3. After the date has been set, push the crown back to the normal position.

SETTING THE DAY *(If your watch has a day window)

1. Pull the crown out to the **1st** position.
2. Turn the crown clockwise to set the day of the week.
3. After the day of the week has been set, push the crown back to the normal position.

*NOTE: *If the date and/ or the day of the week is set between the hours of around 9:00 PM and 2:00 AM, it may not change on the following day.*

VD 54 B

24-HOUR HAND

(Indicates the time on a 24-hour basis)

BUTTON (A)

**In stopwatch function Start/Stop*

CROWN AT NORMAL
POSITION

TIME SETTING
POSITION

BUTTON (B)

 
**In stopwatch function Split/Split
Release/Reset*

STOPWATCH
MINUTE HAND

(Move in minute increments)

STOPWATCH
SECOND HAND

(Move in second increments)

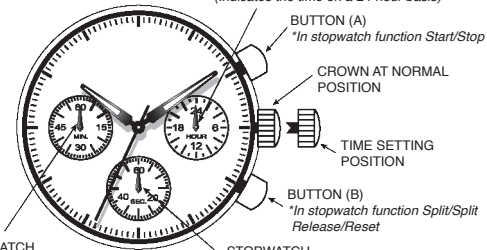

Before setting the time, check if the stopwatch second and minute hands are in the “60” (12 o’clock) position. If either of the stopwatch hands are not in the “60” position, reset them following the procedure below:

1. Pull out the crown.
2. Press button **A** or **B** to reset the stopwatch second and minute hands to “60” position. By pressing button **A** the hands move counter clockwise. By pressing button **B** the hands move counter clockwise.
3. Push the crown back into the normal position.

SETTING THE TIME

1. Pull out the crown when the second hand is at the 12 o’clock position. The second hand will stop on the spot. Do not press any buttons, otherwise the chronograph hands will move.
2. Turn the crown to set hour, minute and the 24-hour hands to the desired time. As the hour hand moves, the 24-hour hand moves correspondingly. When setting the hour hand, check if the 24-hour hand is set properly.
3. Push the crown back in to the normal position to re-engage time keeping.

NOTE: Never pull the Crown when the watch is wet.

HOW TO USE THE STOPWATCH

The measured time indicated by the stopwatch hands, move independently of the center and 24-hour hands. The stopwatch can measure up to 60 minutes in seconds.

*Seconds elapsed up to one minute (6 o'clock eye)

*Minutes elapsed up to one hour (9 o'clock eye)

Before using the stopwatch, reset the stopwatch hands to the "60"(12 o'clock) position.

STANDARD STOPWATCH MEASUREMENT:

1. Press button **A** to start timing.
2. Press button **A** to stop timing. Restart and stop of the stopwatch can be repeated as many times as necessary by pressing button **A**.
3. Press button **B** to reset.

SPLIT TIME MEASUREMENT:

1. Press button **A** to start timing.
2. Press button **B** to stop timing.
3. Press button **A** to stop timing of second event.
4. Press button **B** to view time of second event.
5. Press button **B** to reset.

VX9N

DAY HAND

(Indicates day of the week)

BUTTON (A)

(Day correction)

CROWN AT NORMAL
POSITION

TIME SETTING

[1]

 
BUTTON (B)

(Date correction)

24-HOUR HAND

*(Indicates the time
on a 24-hour basis)*

DATE HAND

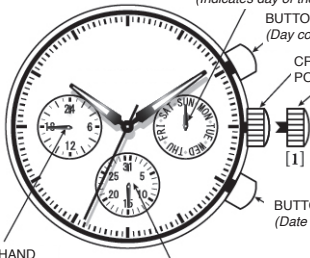

SETTING THE TIME (*Never pull the Crown when the watch is wet*)

1. Pull out the crown to the 1st click position when the second hand is at the 12 o'clock position. The second hand will stop on the spot.
2. Turn the crown to set the time taking AM/PM into consideration.

NOTE: As the hour hands moves, the 24-hour hand moves correspondingly.

When setting the hour hand, check if the 24-hour hand is set properly.

3. When setting the minuye hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.
4. Push the crown back into the normal position to re-engage time keeping.

SETTING THE DATE AND DAY OF THE WEEK

1. Day Correction: press the button **A**, the day hand advances to the next day.
2. Date Correction: press the button **B**, the date hand advances one day.
3. While setting the date and the day hands, check that they move properly in one-day increments.

 
NOTE: Do not set the date and the day hands between 9:00 PM and 4:00 AM otherwise, they may not move properly.

It is necessary to adjust the date on the firsy day after a 30-day month and February.

6P29

FEATURES

- Hours, Minutes, Seconds, Date and Day of the Week are displayed.
- Date, Day and 24 Hour (Military Time) Sub Dials
- Water Resistant from 100 ft. to 165 ft.

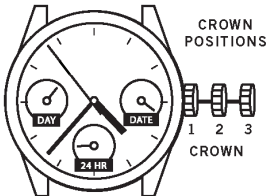

NOTE: Actual watch case may be different. Look for the position of the Day, Date, Month or 24 Hour Sub Dials to see if this is your watch.

SETTING THE TIME

To Advance the Time, Day of the Week and 24 Hour (Military Time):

- A) Pull the Crown out to Position **3** and rotate the Crown clockwise or counter clockwise until the desired Time and Day are obtained.
- B) Push the Crown back into Position **1** to re-engage timekeeping.

 
NOTE: The 24 Hour (Military Time) adjusts automatically when the Time is set.

To advance the Date:


- A) Pull the Crown out to Position **2** and rotate the Crown counter clockwise until the desired Date is obtained.
- B) Push the Crown back into Position **1** to re-engage timekeeping.

DIAGRAMS FOR ADJUSTABLE BRACELET WATCHES:

1. CLASP EXTENDER




 2. HAIRCLIP PIN

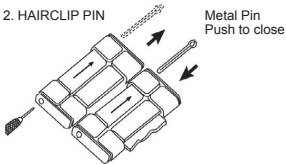


Turn over the watch to look for arrows on the underside of the links, showing you which way you need to push the pin out of the link. Use a pin remover tool to push out the "Hairclip Pin" from the hole located on the side of the link. After the links are removed, simply follow these steps in reverse to re-assemble the bracelet.

 3. SLIDING BAR

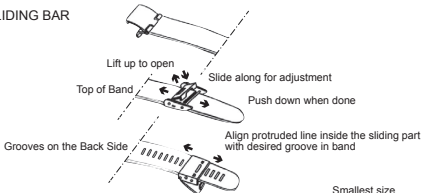


4. FOLD-OVER BUCKLE

 Compress the push pin, and put the ends into the suitable holes along the buckle.



EXTENDER TO MAXIMIZE THE SIZE OF THE FOLD-OVER CLASP FOR A LARGER WRIST
(For a Smaller Size Wrist discard the Extender)

 
If your watch did not come with the Extender, please call with the style number (which is engraved on the case back) and the Extender will be shipped to you.



5. REMOVING THE BAND FROM YOUR WATCH

Lay your watch with the face down (preferably on a cloth to prevent scratching your watch). You will need a sharp point or "Spring Bar Tool" to perform the following steps:

 1. Insert the sharp point between the strap and watch lug to release the strap from case.
2. Once the Spring Bar is detached you can remove your strap. To reattach, depress Spring Bar and insert into hole on the inside of the watch case lug.





Dear Customer:

Help your watch/jewelry retailer protect our environment by properly recycling the button cell battery in your watch. Professional jewelers and watch retailers are best equipped to replace the battery in your watch without damage to the watch case and movement inside. They have the specialized tools and experience to do the right job. Inexperienced people can scar the case and damage the water resistant seal - voiding your warranty.

It is important to recycle your watch battery in an environmentally safe way. You need to recycle your watch battery properly. Your professional watch/jewelry retailer is the best person to do this for you. These professionals collect used batteries and recycle them through licensed waste management companies. Do our environment and your watch a favor. Ask your watch/jewelry professional to replace your battery when it expires.

CHANGING THE BATTERY:

Replace the batteries when the watch becomes slow or does not operate. It is not necessary to return your watch to **EGC** for battery replacement. However, it is recommended that you bring your watch to a local jeweler. Some important facts to remember when changing the battery are: (1) before removing the battery, be sure to denote polarity so that the new battery is installed in exactly the same way and (2) replace with same or equivalent.

NOTE: BATTERIES ARE NOT COVERED UNDER THE WARRANTY. DO NOT DISPOSE OF BATTERY IN FIRE. DO NOT RECHARGE. DO NOT MIX OLD AND NEW BATTERIES. KEEP LOOSE BATTERIES AWAY FROM CHILDREN.

1 YEAR LIMITED WARRANTY:

EGC warranties that it will repair or replace any failure due to defects in materials and/or workmanship free of charge. This warranty is provided by **EGC**, not by the dealer from whom it was purchased. This limited warranty does not apply to normal wear and tear, misuse or abuse and excludes the battery, case, strap, crystal or bracelet. This warranty does not cover any failure to function properly due to neglect such as water immersion or severe shock. Should warranty service be required, please wrap and carefully pack your timepiece and send via insured parcel post to:

EGC SERVICE CENTER, 6015 LITTLE NECK PARKWAY, LITTLE NECK, NY 11362.

Include a brief note with your name and address, description of the problem and a copy of your sales receipt. Enclose \$7.00 to cover the cost of return postage and handling.

"Do not send cash. We accept checks, money orders or Visa and Mastercard."

Card Holder Name: _____

M.C. # _____ EXP. DATE _____

VISA # _____ CCV # _____

Please call 718.482.4195 for a listing of all approved and authorized stations and locations or email servicedept@egluck.com.

FROM OUTSIDE OF THE UNITED STATES:

Clarity Ltd.

Flat A - B, 12/F, Sing Mei Industrial Building

29 - 37 Kwai Wing Road, Kwai Chung, N.T. Hong Kong

tel: 852.2424.2211 fax: 852.2424.2077

email: service@egc-clarity.com