


**ANNE KLEIN**

**시계 지침 및 2년 제한 보증**

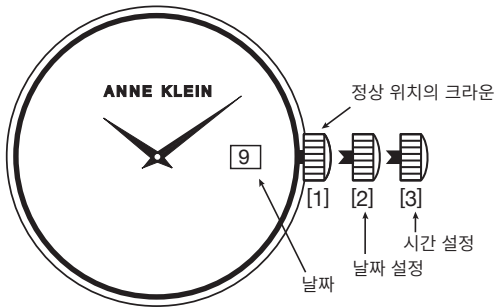

## 시간 설정

크라운을 완전히 멈출 때까지 빼세요(위치 '3'). 초침이 멈춥니다. 원하는 시간이 나올 때까지 크라운을 어느 쪽으로든 돌립니다. 크라운을 완전히 다시 밀어넣어(위치 '1') 시간 유지를 다시 시작합니다. 초침이 움직이기 시작합니다.

**참고사항: 시계가 젖었을 때는 절대로 크라운을 당기지 마세요.**

## 시간, 요일, 날짜 설정

시계에 날짜 또는 요일 및 날짜 창이 있는 경우 크라운을 위치 '2'로 당긴 다음 날짜가 원하는 날짜 전날이 될 때까지 크라운을 양방향으로 돌립니다. 크라운을 완전히 당긴 다음(위치 '3') 크라운을 돌려 시간을 진행합니다. 자정에 도달하면 날짜가 원하는 날짜로 진행됩니다. 원하는 시간이 될 때까지 크라운을 계속 돌립니다. 크라운을 완전히 밀어서 멈출 때까지(위치 '1') 시간 유지를 다시 시작합니다.

## 방수성

시계에 방수 기능이 있는 경우, 시계는 3~5기압(100~165피트)까지 방수가 가능한 지 테스트를 거칩니다.

**참고:** 시간이 지남에 따라 케이스의 개스킷이 마모되어 시계의 방수 기능이 떨어질 수 있습니다. 훈련된 전문가가 배터리를 교체할 때마다 개스킷과 O링을 교체해야 합니다. 원치 않는 응축을 피하기 위해 모든 사양(방수 여부)의 시계는 추위나 더위와 같은 극한의 온도에 노출되어서는 안 됩니다.

## 배터리 교체


시계가 느려지거나 작동하지 않거나, 판독값이 어두워지거나 나타나지 않거나, 백라이트가 꺼지면 배터리를 교체하십시오. 동일하거나 동등한 제품으로 교체하십시오.

**참고사항:** 배터리 교체는 자격을 갖춘 기술자가 수행해야 하며, 동시에 개스킷 상태도 점검해야 합니다.


배터리에는 보증이 적용되지 않습니다.

## 조절 가능한 팔찌 시계를 위한 다이어그램

### 1. 클래스프 익스텐더

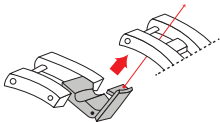


### 2. 원스크류 시스템

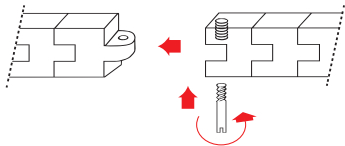


### 3. 2개 나사 시스템

한번에 하나씩 나사를 끼우세요.

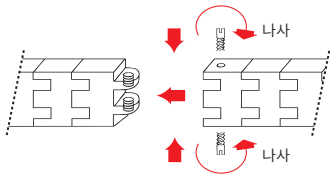


### 4. 연결 시스템

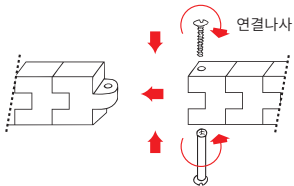


드라이버 2개를 사용하세요. 나사를 돌리기 전에 한쪽을 고정하세요.

## 5. 금속 인서트

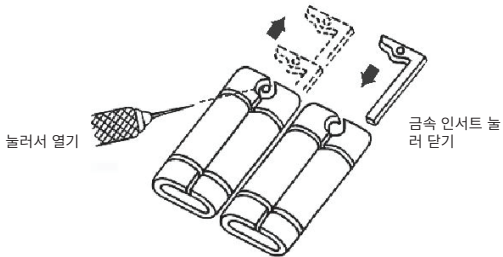

## 6. 헤어클립 핀

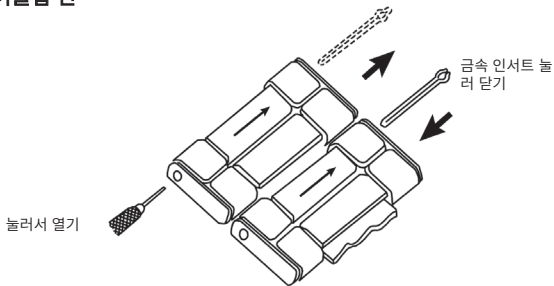

시계를 뒤집어서 링크 밑면에 있는 화살표를 찾아 핀을 링크에서 밀어내야 하는 방향을 보여줍니다. 핀 제거 도구를 사용하여 링크 측면에 있는 구멍에서 “헤어 클립 핀”을 밀어냅니다. 링크를 제거한 후 이 단계를 역순으로 따라 팔찌를 다시 조립합니다.


## 7. 핀 & 튜브 1



링크의 측면도 "B"




링크의 측면도 "A"

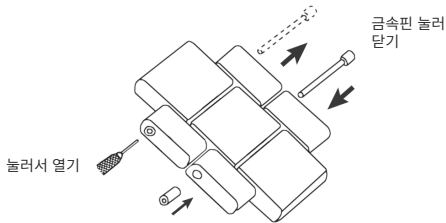

시계 링크의 측면 가장자리를 확인하여 링크의 어느 쪽이 "A" 인지 "B"인지 **확인합니다**. 핀 제거 도구를 사용하여 측면 "B"에 있는 구멍에서 핀을 밀어냅니다. 원하는 링크를 제거한 후 이 단계를 역순으로 따라 팔찌를 다시 조립합니다.


## 8. 핀 & 튜브 2

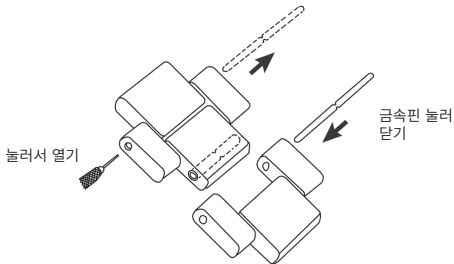


이 시계 구조의 링크를 조정하려면 핀을 바꿔야 합니다. 도구 키트를 도구 키트 아래에서 발견된 가장 긴 핀(길이 약 10mm)에 끼웁니다. 그런 다음 핀 제거 도구를 사용하여 링크 양쪽에서 핀을 밀어냅니다. 원하는 링크를 제거한 후 이 단계를 역순으로 따라 팔찌를 다시 조립합니다.

## 9. 슬라이딩 바

밴드의 정상

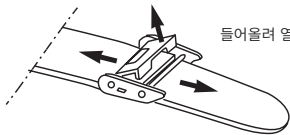


들어올려 열어주세요

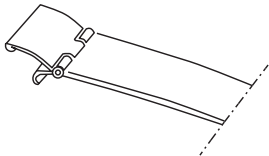

조정을 위해 슬라이드하세요(완료되면 아래로 누르세요)


밴드 하단

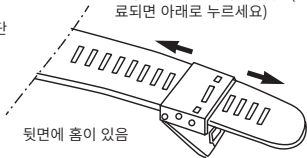

뒷면에 홈이 있음


슬라이딩 부분 내부의 돌출선을 밴드의 원하는 홈에 맞춥니다.

## 10. 접이식 버클


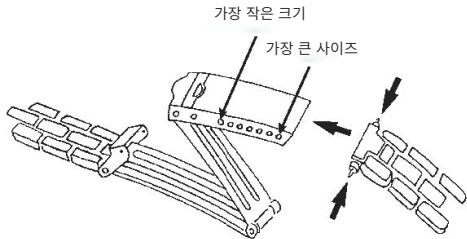


푸시핀을 눌러서 버클을 따라 적당한 구멍에 끝을 넣어주세요.

## 메시 밴드 조정

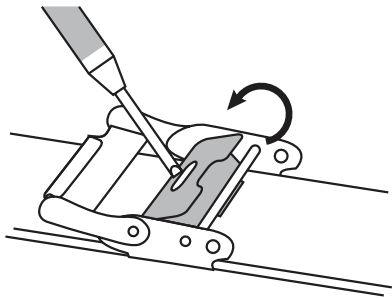

1. 작은 드라이버나 조정 도구의 끝을 걸쇠의 슬롯에 넣습니다. 드라이버에 살짝 힘을 가하고 걸쇠의 윗부분을 들어 올립니다.

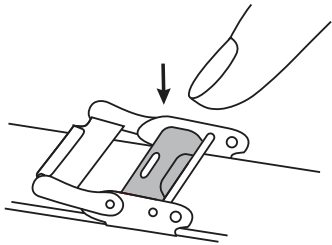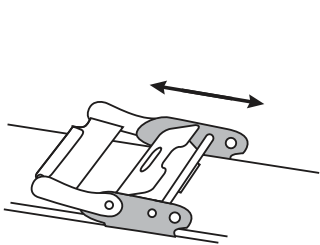

2. 메쉬 스트랩의 걸쇠를 위아래로 밀어 손목 크기에 맞게 밴드를 조정합니다. 손목에 맞게 조정되면 걸쇠의 뒷면을 메쉬 시계 스트랩의 해당 홈에 맞춥니다.

3. 슬롯형 걸쇠를 다시 아래로 눌러 단단히 단습니다.


## 1. 박스 세트를 업데이트하려면:

### 스트랩 교체

스트랩을 제거하려면 시계를 아래로 향하게 하여 부드럽고 평평한 표면에 놓습니다. 스트랩 레버를 왼쪽으로 밀고 스트랩을 시계에서 떼어냅니다.

### 새로운 스트랩을 삽입하려면


스트랩 핀을 왼쪽 핀 홈에 끼웁니다. 스트랩 레버를 왼쪽으로 밀어 넣습니다. 레버를 놓으면 오른쪽 핀이 오른쪽 핀 홈에 “딸각” 소리가 나도록 스트랩을 맞춥니다.

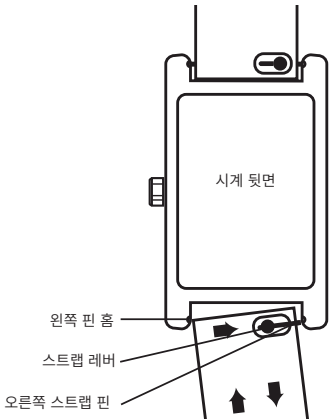

## 2. 박스 세트를 업데이트하려면:

### 베젤 변경

베젤을 제거하려면 베젤을 시계에서 들어올릴 수 있을 때까지 시계 반대 방향으로 돌립니다. 새 베젤을 시계 케이스 위에 놓고 베젤이 조여질 때까지 시계 방향으로 돌립니다.

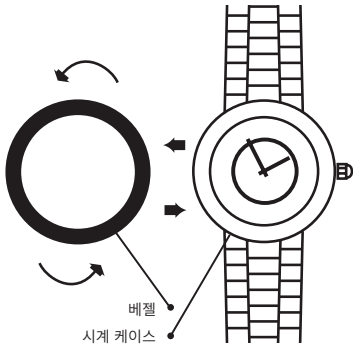


### 3. 박스 세트를 업데이트하려면:

#### 베젤과 브레이슬릿 교체

베젤을 제거하려면 베젤을 시계 반대 방향으로 돌려 시계에서 베젤을 들어 올리세요.

시계를 똑바로 세우고 팔찌를 풀어줍니다. 새로운 팔찌를 걸어줍니다.

새 베젤을 시계 케이스 위에 놓고 베젤이 조여질 때까지 시계 방향으로 돌립니다.

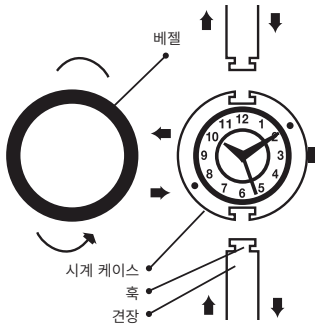

## 고객님, 안녕하세요:

시계/보석 리테일러가 시계의 단추형 전지를 올바르게 재활용하여 환경을 보호하도록 도와주세요. 전문 보석상과 시계 리테일러는 시계 케이스와 내부 무브먼트를 손상시키지 않고 시계의 전지를 교체할 수 있는 최고의 역량을 갖추고 있습니다. 이들은 작업을 올바르게 수행할 수 있는 전문 도구와 경험을 보유하고 있습니다. 경험이 부족한 사람은 케이스에 흠집을 내고 방수 씬을 손상시켜 보증이 무효화될 수 있습니다. 시계 전지를 환경적으로 안전한 방식으로 재활용하는 것이 중요합니다. 시계 전지에는 전지 부식과 시계 손상을 방지하는 데 필요한 매우 소량의 수은이 포함되어 있습니다. 수은은 밀봉된 전지에 들어 있으므로 사용자나 시계에 위험이 없습니다. 하지만 시계 전지를 올바르게 재활용해야 합니다. 전문 시계/보석 리테일러가 이 작업을 대신 수행할 수 있는 가장 적합한 사람입니다. 이러한 전문가는 사용된 전지를 수거하여 허가받은 폐기물 관리 회사를 통해 재활용합니다.

우리의 환경과 시계를 위해 도움을 주세요. 시계/보석 전문가에게 배터리가 만료되면 교체해 달라고 요청하세요.

(1) 산화은(1.55볼트) 배터리가 필요합니다.

시계를 서비스를 위해 반품하려면 ANNE KLEIN WATCH CO.나 공인 서비스 센터로 반품하세요. 구매처로 반품하면 안 됩니다.

튼튼한 상자에 시계를 조심스럽게 포장하세요(선물 상자에 넣어 보내지 마세요. 선물 상자는 반품되지 않습니다.) 다음 주소로 보내주세요.

**ANNE KLEIN WATCHES**  
**6015 Little Neck Parkway**  
**Little Neck, NY 11362**  
**ATTN: Service Dept.**  
**Tel: +1 718 482-4195**  
**Email: [servicedept@egluck.com](mailto:servicedept@egluck.com)**

공인 서비스 센터:

**Clarity Ltd.**  
**Flat A-B, 12/F,**  
**Sing Mei Industrial Building**  
**29-37 Kwai Wing Road**  
**Kwai Chung, N.T. Hong Kong**  
**Tel: 852.2424.2211**  
**Fax: 852.2424.2077**  
**Email: [senrice@egc-clarity.com](mailto:senrice@egc-clarity.com)**

**Baode Watch (Shen Zhen) Co. Ltd**  
**3/F, 56 Mei Bao Road, Xin Qiao Tang**  
**Ind. Zone, Da Lang, Longhua**  
**District, Shenzhen, China 518109**  
**Tel: 86 755-28112770**

분실 가능성이 있으므로 우편을 이용할 때는 시계 보험에 가입하고 영수증을 요청하는 것이 좋습니다. 시계를 세척, 윤활, 배터리 교체 또는 크리스털 교체가 필요한 경우 해당 지역에서 ANNE KLEIN 승인 서비스 센터를 이용할 수 있습니다. 이러한 수리 시설은 ANNE KLEIN 부품과 구성품을 사용하여 품질과 향후 성능을 보장합니다. 보증에 포함되지 않는 서비스나 수리가 필요한 경우 사전에 무료 견적을 받을 수 있습니다. 보증에 포함된 수리에는 구매 증빙이 필요할 수 있으므로 구매 영수증을 보관하세요. ANNE KLEIN 승인 서비스 스테이션 및 위치에 대한 자세한 내용은 위에 나열된 서비스 센터로 전화하세요.

## 2년 제한 보증

이 ANNE KLEIN 시계는 소유자인 귀하에게 재료 또는 제작상의 모든 결함에 대해 2년간 보증됩니다. 이 보증은 정상적인 마모나 남용에는 적용되지 않으며 배터리, 케이스, 스트랩, 크리스털 또는 브레이슬릿은 제외됩니다. 이 기간 내에 무브먼트에 결함이나 오작동이 발생하는 경우 당사의 선택에 따라 수리 또는 교체됩니다. 사고, 오용, 방치 또는 보증되지 않는 부품(케이스, 크리스털, 스트랩, 브레이슬릿 또는 배터리) 교체와 같이 당사의 통제를 벗어난 이유로 추가 서비스가 필요하지 않는 한 추가 비용이 청구되지 않습니다. 이 경우 적당한 요금이 청구됩니다.

앞서 언급한 구제책은 배타적입니다. ANNE KLEIN은 우발적 또는 결과적 손해에 대해 책임을 지지 않습니다. 시계의 다른 부분을 수리해야 하는 경우, 시계에 대한 빠르고 저렴한 수리를 위해 당사 서비스 센터를 이용하세요. 이 보증은 귀하에게 구체적인 법적 권리를 부여하며, 국가마다 다를 수 있는 다른 권리도 가질 수 있습니다.

EU Representative: 24hour-AR  
Van Nelleweg 1  
3044 BC Rotterdam  
The Netherlands  
compliance@24hour-ar.com


UK Representative: 24hour-AR  
15 Beaufort Court Admirals Way  
Canary Wharf, London  
United Kingdom E14 9XL  
compliance@24hour-ar.com

**\* 제품 개선을 위해 사전 통지 없이 사양이 변경될 수 있으며, 모델에 따라 디자인이 다를 수 있습니다.**



**ANNE KLEIN**

**WATCH INSTRUCTIONS &  
2-YEAR LIMITED WARRANTY**

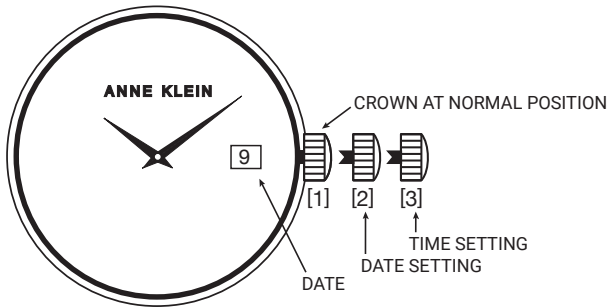

## **SETTING THE TIME**

Pull out Crown all the way until it stops (position '3'). The second hand will stop. Rotate the Crown in either direction until desired time is obtained. Push Crown back in all the way (position '1') to re-engage time keeping. Second hand will begin to move.

***NOTE: Never pull the Crown when the watch is wet.***

## **SETTING THE TIME, DAY AND DATE**

If your watch has a Date or a Day and Date Window, pull the Crown out to position '2' and turn the Crown in both directions until the Date showing is the day before the desired Date. Pull out Crown all the way (position '3') and turn the Crown to advance time. When midnight is reached, the Date will advance to the desired Date. Continue to turn the Crown until desired time is obtained. Push the Crown back in all the way until it stops (position '1') to re-engage time keeping.

## **WATER RESISTANCE**

If your watch is water resistant, the watch is tested to be water resistant to 3-5 atmospheres (100-165 feet).

***NOTE: Over time, the gaskets of the case may become worn and reduce the water resistance of the watch. A trained specialist should change the gaskets and the O-ring each time the battery is changed. To avoid any unwanted condensation, watches of all specifications (water resistant or not) should not be exposed to extreme temperatures such as cold or heat.***

## **CHANGING THE BATTERY**


Replace batteries when the watch becomes slow or does not operate, the readout darkens or does not appear or the backlight fails. Replace with same or equivalent.

***NOTE: Battery change should be performed by a qualified technician who should also check the condition of the gaskets at the same time.***


**BATTERIES ARE NOT COVERED UNDER WARRANTY.**

## DIAGRAMS FOR ADJUSTABLE BRACELET WATCHES

### 1. CLASP EXTENDER

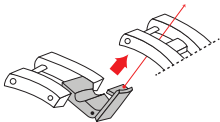


### 2. ONE SCREW SYSTEM

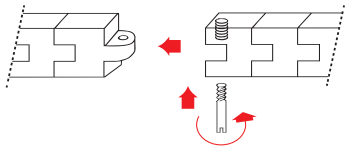


### 3. TWO SCREW SYSTEM

Screw in one at a time

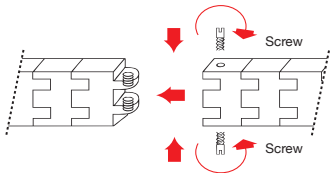


### 4. CONNECTION SYSTEM

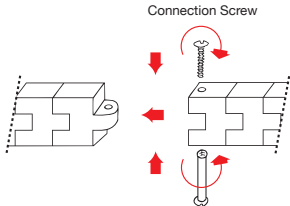


Use 2 screwdrivers. Hold one side steady before turning the screw.

## 5. METAL INSERT

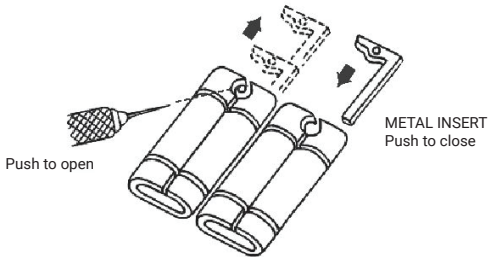

## 6. HAIRCLIP PIN

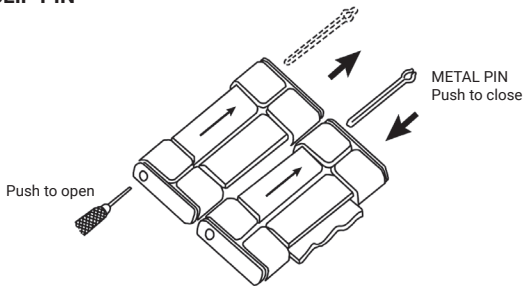

Turn over the watch to look for arrows on the underside of the links, showing you which way you need to push the pin out of the link. Use a pin remover tool to push out the "hair clip pin" from the hole located on the side of the link. After the links are removed, simply follow these steps in reverse to re-assemble the bracelet.


## 7. PIN & TUBE 1



Side view "B" of Link




Side view "A" of Link

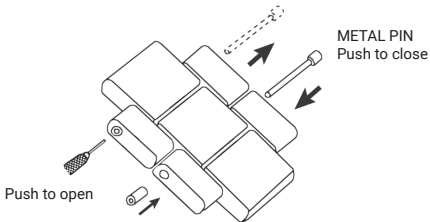


Check the side edge of the watch link, to determine which side of the link is "A" or "B". Take a pin remover tool and push out the pin from the hole located on side "B". After the desired links are removed, simply follow these steps in reverse to re-assemble the bracelet.

## 8. PIN & TUBE 2

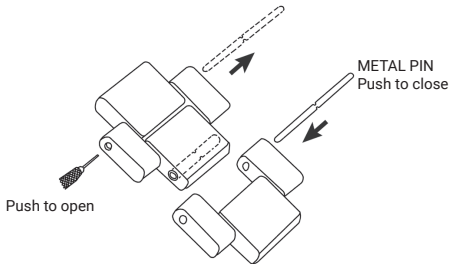



In order to adjust links for this watch construction, you must switch the pin on the tool kit to the longest pin (approximately 10mm long) found under the tool kit. Then use the pin remover tool to push out the pins from either side of the links. After the desired links are removed, simply follow these steps in reverse to re-assemble the bracelet.

## 9. SLIDING BAR

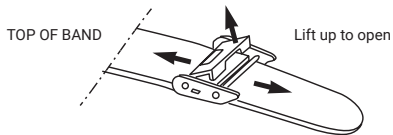


Slide along for adjustment  
(Push down when done)

BOTTOM OF BAND

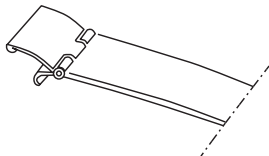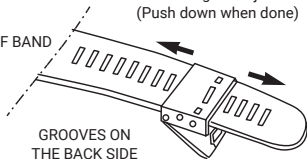


Align protruded line inside the sliding  
part with desired groove in band

## 10. FOLD-OVER BUCKLE

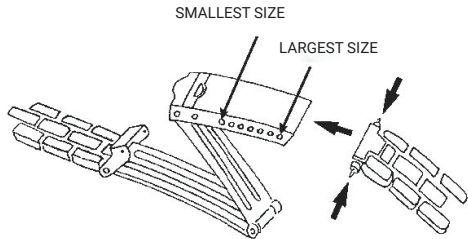


Compress the push pin, and put the ends into the suitable holes along the buckle.

## 11. MESH BAND ADJUSTMENT

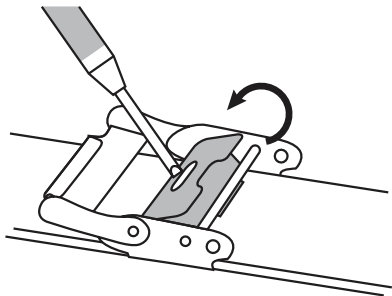

1. Place the tip of a small screwdriver or adjustment tool into the slot on the clasp. Gently exert pressure down on the screwdriver and pry the top portion on the clasp open.

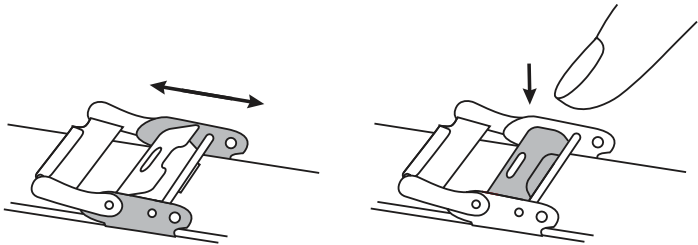

2. Slide the clasp up or down the mesh strap to adjust the band for the size of your wrist. When the proper fit for your wrist has been obtained, align the back of the clasp with the corresponding groove in the mesh watch strap.
3. Press the slotted clasp back down to securely close it.


## 1. TO UPDATE YOUR BOXSET:

### CHANGING THE STRAPS

To remove the Strap, place the watch face down on a soft, flat surface. Slide the Strap Lever to the left and pull the Strap away from the watch.

### TO INSERT THE NEW STRAP


Set Strap Pin into the Left Pin Groove. Slide the Strap Lever to the left. Align the Strap so the Right Pin “clicks” into the Right Pin Groove when the Lever is released.

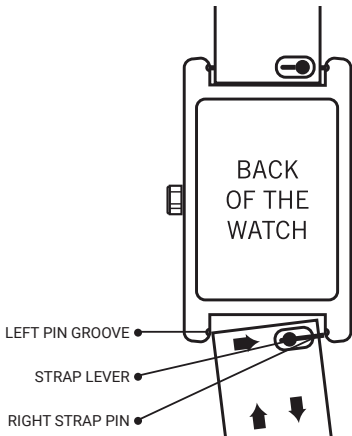

## 2. TO UPDATE YOUR BOXSET:

### CHANGING THE BEZEL

To remove the Bezel, turn the Bezel counterclockwise until you can lift the Bezel from the watch. Place the new Bezel over the Watch Case and turn the Bezel clockwise until the Bezel is tight.

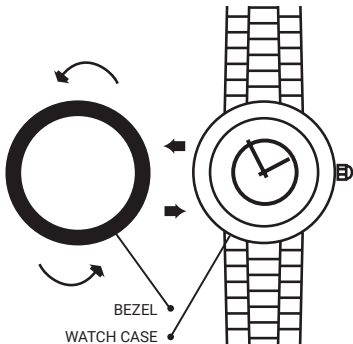


### 3. TO UPDATE YOUR BOXSET:

#### CHANGING THE BEZEL AND BRACELET

To remove the Bezel, turn the Bezel counterclockwise until you can lift the Bezel from the watch.

Hold the Watch upright and unhook the Bracelet. Hook on the new Bracelet.

Place the new Bezel over the Watch Case and turn the Bezel clockwise until the Bezel is tight.

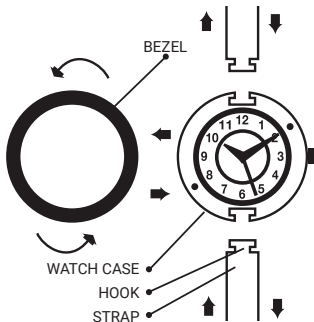

**Dear Customer:**

Help your watch/jewelry retailer protect our environment by properly recycling the button cell battery in your watch. Professional jewelers and watch retailers are best equipped to replace the battery in your watch without damage to the watch case and movement inside. They have the specialized tools and experience to do the job right. Inexperienced people can scar the case and damage the water resistant seal – voiding your warranty. It is important to recycle your watch battery in an environmentally safe way. Watch batteries contain very small amounts of mercury, which is required to prevent corrosion of the battery and damage to your watch. There is no danger to you or your watch from the mercury because it is in the sealed battery. But you need to recycle your watch battery properly. Your professional watch/jewelry retailer is the best person to do this for you. These professionals collect used batteries and recycle them through licensed waste management companies.

Do our environment and your watch a favor. Ask your watch/jewelry professional to replace your battery when it expires.

Requires (1) silver oxide )(1.55 volt) battery included

**TO RETURN YOU WATCH FOR SERVICING:  
RETURN IT TO ANNE KLEIN CO. OR TO AN AUTHORIZED SERVICE CENTER;  
IT SHOULD NOT BE RETURNED TO PLACE OF PURCHASE.**

Carefully pack you watch in a sturdy box (do not send in a gift box for same will not be returned) and mail to:

ANNE KLEIN WATCHES

6015 Little Neck Parkway  
Little Neck, NY 11362

ATTN: Service Dept.

Tel: +1 718 482-4195

Email: [servicedept@egluck.com](mailto:servicedept@egluck.com)

Clarity Ltd.

Flat A- B, 12/F,  
Sing Mei Industrial Building  
29-37 Kwai Wing Road  
Kwai Chung, N.T. Hong Kong

Tel: 852.2424.2211

Fax: 852.2424.2077

Email: [service@egc-clarity.com](mailto:service@egc-clarity.com)

Because of possible loss, we recommend that you insure your watch, return receipt requested, when using the mail. If your watch requires cleaning, lubrication, battery changing, or needs a crystal replaced, ANNE KLEIN approved Service Centers may be available in your area. These repair facilities use ANNE KLEIN parts and components to assure quality and future performance. Free estimates are available in advance, should you need servicing or repairs not covered under the warranty. Repairs covered under the warranty may require proof of purchase, so retain the purchase receipt. For further information regarding ANNE KLEIN approved Service Stations and locations, please call the Service Centers listed above.

## **2 YEAR LIMITED WARRANTY**

This Anne Klein Watch is warranted to you, the owner, for 2 years against all defects in material or workmanship. This warranty does not apply to normal wear and tear or abuse and excludes batteries, case, strap, crystal, or bracelet. In the event of a defect or malfunction of the movement within this period it will be repaired or replaced, at our option. No additional charge will be made unless additional servicing is necessary for reasons beyond our control such as accident, misuse, neglect or replacement of parts not warranted is required such as case, crystal, strap, bracelet or batteries in which event a moderate charge will be made.

The aforementioned remedy is exclusive. ANNE KLEIN shall not be liable for any incidental or consequential damages. Should any other part of your watch require repair, please use our Service Centers for quick and inexpensive repairs on your watch. This warranty gives you specific legal rights and you may also have other rights which may vary from country to country.

EU Representative: 24hour-AR  
Van Nelleweg 1  
3044 BC Rotterdam  
The Netherlands  
compliance@24hour-ar.com

UK Representative: 24hour-AR  
15 Beaufort Court Admirals  
Way Canary Wharf, London  
United Kingdom E14 9XL  
compliance@24hour-ar.com

\* SPECIFICATIONS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE FOR PRODUCT  
IMPROVEMENT, DESIGN MAY VARY DEPENDING ON THE MODEL.



