


ANNE KLEIN

**PETUNJUK PENGGUNAAN & GARANSI
TERBATAS 2 TAHUN**

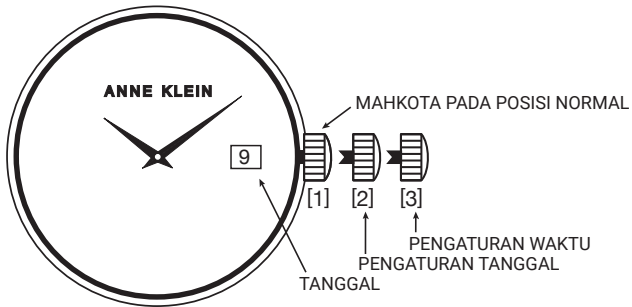

MENENTUKAN WAKTU

Tarik keluar Mahkota sepenuhnya hingga berhenti (posisi '3'). Jarum detik akan berhenti. Putar Mahkota ke kedua arah hingga waktu yang diinginkan tercapai. Dorong Mahkota kembali sepenuhnya (posisi '1') untuk mengaktifkan kembali penunjuk waktu. Jarum detik akan mulai bergerak.

CATATAN: Jangan sekali-kali menarik Crown saat jam basah.

MENENTUKAN WAKTU, HARI DAN TANGGAL

Jika jam tangan Anda memiliki Tanggal atau Jendela Hari dan Tanggal, tarik Mahkota keluar ke posisi '2' dan putar Mahkota ke kedua arah hingga Tanggal yang ditampilkan adalah hari sebelum Tanggal yang diinginkan. Tarik Mahkota keluar sepenuhnya (posisi '3') dan putar Mahkota untuk memajukan waktu. Saat tengah malam tiba, Tanggal akan maju ke Tanggal yang diinginkan. Terus putar Mahkota hingga waktu yang diinginkan tercapai. Dorong Mahkota kembali sepenuhnya hingga berhenti (posisi '1') untuk mengaktifkan kembali penunjuk waktu.

TAHAN AIR

Jika jam tangan Anda tahan air, jam tersebut telah diuji ketahanan airnya hingga 3-5 atmosfer (100-165 kaki).

CATATAN: Seiring berjalannya waktu, gasket casing dapat aus dan mengurangi ketahanan air pada jam tangan. Seorang spesialis terlatih harus mengganti gasket dan cincin O setiap kali baterai diganti. Untuk menghindari kondensasi yang tidak diinginkan, jam tangan dengan semua spesifikasi (tahan air atau tidak) tidak boleh terkena suhu ekstrem seperti dingin atau panas.

MENGGANTI BATERAI


Ganti baterai saat jam tangan menjadi lambat atau tidak beroperasi, tampilan menjadi gelap atau tidak muncul, atau lampu latar mati. Ganti dengan baterai yang sama atau setara.

CATATAN: Penggantian baterai harus dilakukan oleh teknisi yang berkualifikasi yang juga harus memeriksa kondisi gasket pada saat yang sama.


BATERAI TIDAK TERCAKUP DALAM GARANSI.

3. SISTEM SATU SEKRUP

Pasangkan satu per satu.

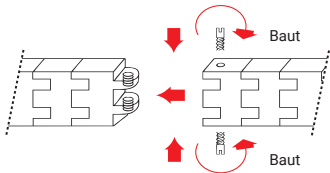


4. SISTEM KONESKI

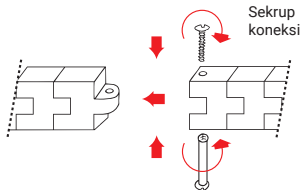

Gunakan 2 obeng. Pegang salah satu sisinya dengan kuat sebelum memutar sekrup.


5. SISIPAN LOGAM

Tekan untuk membuka

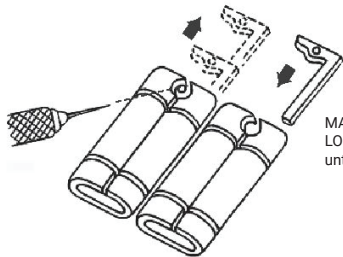

MASUKKAN
LOGAM Tekan
untuk menutup

6. JEPIT RAMBUT

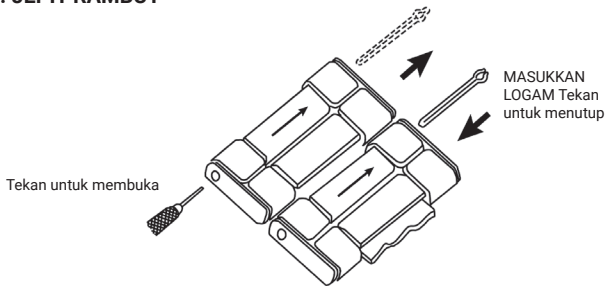

Balikkan jam tangan untuk mencari tanda panah di bagian bawah mata rantai, yang menunjukkan arah untuk mendorong pin keluar dari mata rantai. Gunakan alat pelepas pin untuk mendorong "Peniti Jepit Rambut" keluar dari lubang yang terletak di sisi mata rantai. Setelah mata rantai dilepaskan, cukup ikuti langkah-langkah berikut secara terbalik untuk memasang kembali gelang.


7. PIN & TABUNG 1



Tampilan samping "B" dari Link




Tampilan samping "A" dari Link

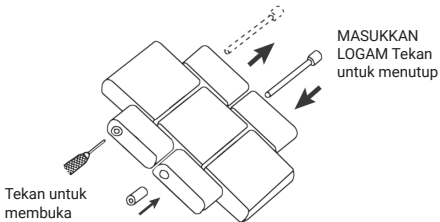


Periksa sisi tepi mata rantai arloji untuk menentukan sisi mata rantai yang mana yang "A" atau "B". Ambil alat pelepas pin dan dorong keluar pin dari lubang yang terletak di sisi "B". Setelah mata rantai yang diinginkan dilepas, cukup ikuti langkah-langkah berikut secara terbalik untuk memasang kembali gelang.

8. PIN & TABUNG 2

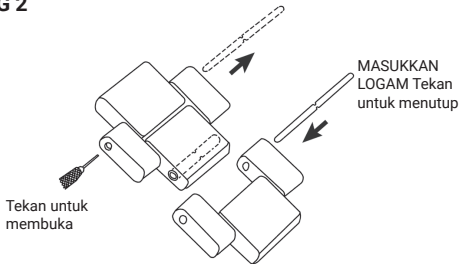


Untuk menyesuaikan tautan untuk konstruksi jam ini, Anda harus mengganti pin pada tool kit ke pin terpanjang (panjang sekitar 10mm) yang ditemukan di bawah tool kit. Kemudian gunakan alat pelepas pin untuk mendorong keluar pin dari kedua sisi rantai. Setelah rantai yang diinginkan dilepaskan, cukup ikuti langkah-langkah berikut secara terbalik untuk memasang kembali gelang.

9. BAR GESER

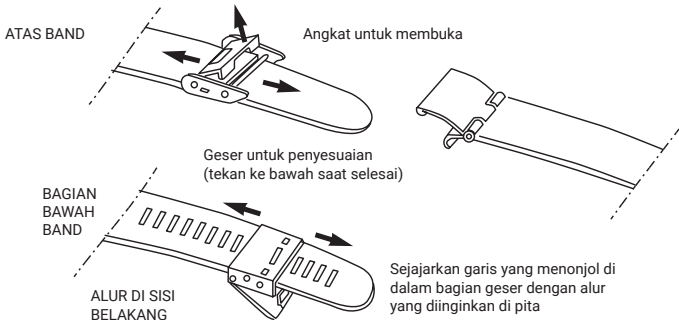


10. GESPER LIPAT


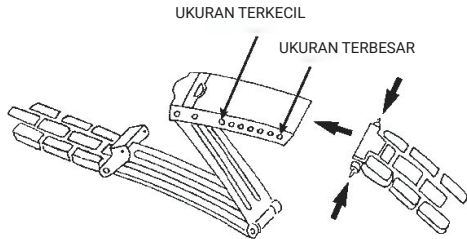


Tekan pin penekan, lalu letakkan ujung-ujungnya ke dalam lubang yang sesuai di sepanjang gesper.

PENYESUAIAN PITA JARINGAN

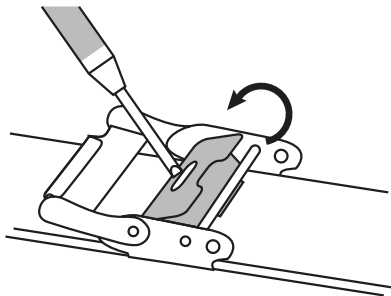

1. Letakkan ujung obeng kecil atau alat penyetel ke dalam slot pada kaitan. Tekan obeng dengan perlahan dan cangkil bagian atas kaitan hingga terbuka.

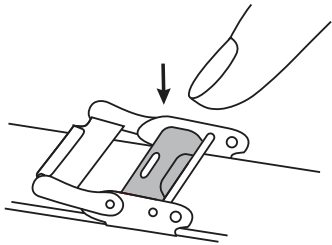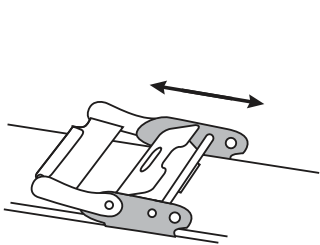

2. Geser kait ke atas atau ke bawah pada tali jam tangan jala untuk menyesuaikan tali dengan ukuran pergelangan tangan Anda. Setelah ukuran yang pas untuk pergelangan tangan Anda diperoleh, sejajarkan bagian belakang kait dengan alur yang sesuai pada tali jam tangan jala.

3. Tekan kembali kait berlubang tersebut untuk menutupnya dengan aman.


1. UNTUK MEMPERBARUI BOXSET ANDA:

MENGGANTI TALI

Untuk melepaskan Tali, letakkan jam tangan menghadap ke bawah pada permukaan yang lembut dan datar. Geser Tuas Tali ke kiri dan tarik Tali dari jam tangan.

UNTUK MEMASUKKAN TALI BARU


Atur Pin Tali ke Alur Pin Kiri. Geser Tuas Tali ke kiri. Sejajarkan Tali sehingga Pin Kanan berbunyi "klik" ke Alur Pin Kanan saat Tuas dilepaskan.

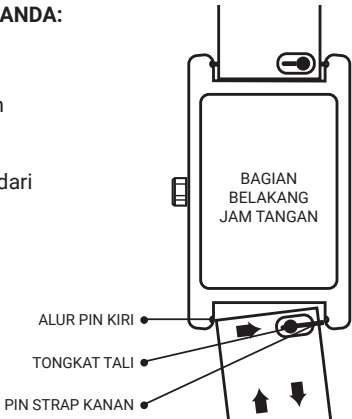

2. UNTUK MEMPERBARUI BOXSET ANDA:

MENGGANTI BEZEL

Untuk melepas Bezel, putar Bezel berlawanan arah jarum jam hingga Anda dapat mengangkat Bezel dari jam tangan. Letakkan Bezel baru di atas Casing Jam Tangan dan putar Bezel searah jarum jam hingga Bezel kencang.

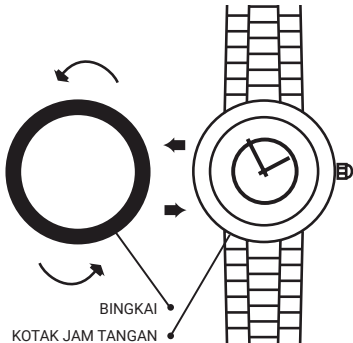


3. UNTUK MEMPERBARUI BOXSET ANDA:

MENGGANTI BEZEL DAN GELANG

Untuk melepaskan Bezel, putar Bezel berlawanan arah jarum jam hingga Anda dapat mengangkat Bezel dari jam tangan.

Pegang Jam Tangan dalam posisi tegak dan lepaskan Gelang. Kaitkan Gelang baru.

Letakkan Bezel yang baru di atas Casing Jam dan putar Bezel searah jarum jam hingga Bezel kencang.

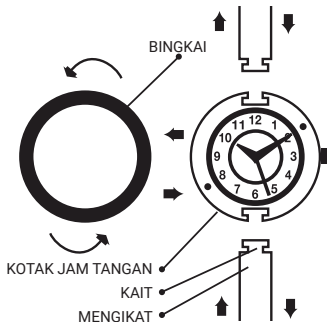

Pelanggan yang terhormat:

Bantu pengecer jam tangan/perhiasan Anda melindungi lingkungan kita dengan mendaur ulang baterai sel kancing di jam tangan Anda dengan benar. Penjual perhiasan dan pengecer jam tangan profesional paling siap untuk mengganti baterai di jam tangan Anda tanpa merusak casing jam tangan dan gerakan di dalamnya. Mereka memiliki peralatan khusus dan pengalaman untuk melakukan pekerjaan dengan benar. Orang yang tidak berpengalaman dapat membuat casing tergores dan merusak segel tahan air – membatalkan garansi Anda. Penting untuk mendaur ulang baterai jam tangan Anda dengan cara yang aman bagi lingkungan. Baterai jam tangan mengandung merkuri dalam jumlah yang sangat kecil, yang diperlukan untuk mencegah korosi pada baterai dan kerusakan pada jam tangan Anda. Tidak ada bahaya bagi Anda atau jam tangan Anda dari merkuri karena merkuri ada di dalam baterai yang disegel. Namun, Anda perlu mendaur ulang baterai jam tangan Anda dengan benar. Pengecer jam tangan/perhiasan profesional Anda adalah orang terbaik untuk melakukan ini untuk Anda. Para profesional ini mengumpulkan baterai bekas dan mendaur ulangnya melalui perusahaan pengelolaan limbah berlisensi.

Jaga lingkungan dan jam tangan Anda. Mintalah ahli jam tangan/perhiasan untuk mengganti baterai saat baterainya habis.

Mebutuhkan (1) baterai oksida perak (1,55 volt) Termasuk

**UNTUK MENGEMBALIKAN JAM TANGAN ANDA UNTUK DIPERBAIKI:
KEMBALIKAN KE ANNE KLEIN WATCH CO. ATAU KE PUSAT LAYANAN
RESMI; JANGAN DIKEMBALIKAN KE TEMPAT PEMBELIAN.**

Bungkus jam tangan Anda dengan hati-hati dalam kotak yang kokoh (jangan kirim dalam kotak hadiah karena tidak akan dikembalikan) dan kirimkan ke:

ANNE KLEIN WATCHES
6015 Little Neck Parkway
Little Neck, NY 11362
ATTN: Service Dept.
Tel: +1 718 482-4195
Email: servicedept@egluck.com

PUSAT LAYANAN RESMI:

Clarity Ltd.
Flat A-B, 12/F,
Sing Mei Industrial Building
29-37 Kwai Wing Road
Kwai Chung, N.T. Hong Kong
Tel: 852.2424.2211
Fax: 852.2424.2077
Email: senrice@egc-clarity.com

Baode Watch (Shen Zhen) Co. Ltd
3/F, 56 Mei Bao Road, Xin Qiao Tang
Ind. Zone, Da Lang, Longhua
District, Shenzhen, China 518109
Tel: 86 755-28112770

Karena kemungkinan kehilangan, kami sarankan Anda mengasuransikan jam tangan Anda, dengan meminta tanda terima pengembalian, saat menggunakan pos. Jika jam tangan Anda perlu dibersihkan, dilumasi, diganti baterainya, atau kristalnya perlu diganti, Pusat Servis yang disetujui ANNE KLEIN mungkin tersedia di area Anda. Fasilitas perbaikan ini menggunakan suku cadang dan komponen ANNE KLEIN untuk memastikan kualitas dan kinerja di masa mendatang. Perkiraan biaya gratis tersedia di muka, jika Anda memerlukan servis atau perbaikan yang tidak tercakup dalam garansi. Perbaikan yang tercakup dalam garansi mungkin memerlukan bukti pembelian, jadi simpan tanda terima pembeliannya. Untuk informasi lebih lanjut mengenai Stasiun Servis dan lokasi yang disetujui ANNE KLEIN, silakan hubungi Pusat Servis yang tercantum di atas.

GARANSI TERBATAS 2 TAHUN

Jam tangan ANNE KLEIN ini bergaransi kepada Anda, pemiliknya, selama 2 tahun terhadap semua cacat bahan atau pengerjaan. Garansi ini tidak berlaku untuk keausan normal atau penyalahgunaan dan tidak termasuk baterai, casing, tali, kristal, atau gelang. Jika terjadi cacat atau malfungsi pada mesin dalam periode ini, mesin akan diperbaiki atau diganti sesuai pilihan kami. Tidak ada biaya tambahan yang akan dikenakan kecuali servis tambahan diperlukan karena alasan di luar kendali kami seperti kecelakaan, penyalahgunaan, kelalaian, atau penggantian komponen yang tidak bergaransi seperti casing, kristal, tali, gelang, atau baterai. Jika terjadi kerusakan, biaya sedang akan dikenakan.

Perbaikan yang disebutkan di atas bersifat eksklusif. ANNE KLEIN tidak bertanggung jawab atas segala kerusakan insidental atau konsekuensial. Jika ada bagian lain dari jam tangan Anda yang memerlukan perbaikan, silakan gunakan Pusat Layanan kami untuk perbaikan cepat dan murah pada jam tangan Anda. Garansi ini memberi Anda hak hukum khusus dan Anda mungkin juga memiliki hak lain yang mungkin berbeda di setiap negara.

EU Representative: 24hour-AR
Van Nelleweg 1
3044 BC Rotterdam
The Netherlands
compliance@24hour-ar.com


UK Representative: 24hour-AR
15 Beaufort Court Admirals Way
Canary Wharf, London
United Kingdom E14 9XL
compliance@24hour-ar.com

*** SPESIFIKASI DAPAT BERUBAH TANPA PEMBERITAHUAN
SEBELUMNYA UNTUK PERBAIKAN PRODUK, DESAIN DAPAT
BERBEDA TERGANTUNG PADA MODEL.**



ANNE KLEIN

**WATCH INSTRUCTIONS &
2-YEAR LIMITED WARRANTY**

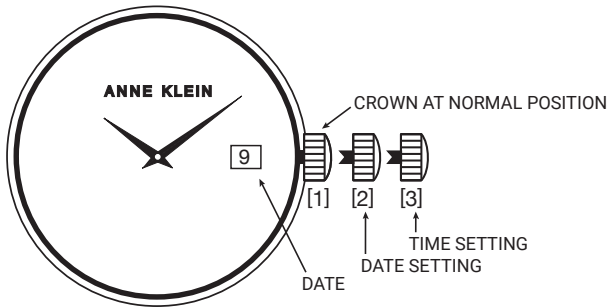

SETTING THE TIME

Pull out Crown all the way until it stops (position '3'). The second hand will stop. Rotate the Crown in either direction until desired time is obtained. Push Crown back in all the way (position '1') to re-engage time keeping. Second hand will begin to move.

NOTE: Never pull the Crown when the watch is wet.

SETTING THE TIME, DAY AND DATE

If your watch has a Date or a Day and Date Window, pull the Crown out to position '2' and turn the Crown in both directions until the Date showing is the day before the desired Date. Pull out Crown all the way (position '3') and turn the Crown to advance time. When midnight is reached, the Date will advance to the desired Date. Continue to turn the Crown until desired time is obtained. Push the Crown back in all the way until it stops (position '1') to re-engage time keeping.

WATER RESISTANCE

If your watch is water resistant, the watch is tested to be water resistant to 3-5 atmospheres (100-165 feet).

NOTE: Over time, the gaskets of the case may become worn and reduce the water resistance of the watch. A trained specialist should change the gaskets and the O-ring each time the battery is changed. To avoid any unwanted condensation, watches of all specifications (water resistant or not) should not be exposed to extreme temperatures such as cold or heat.

CHANGING THE BATTERY


Replace batteries when the watch becomes slow or does not operate, the readout darkens or does not appear or the backlight fails. Replace with same or equivalent.

NOTE: Battery change should be performed by a qualified technician who should also check the condition of the gaskets at the same time.


BATTERIES ARE NOT COVERED UNDER WARRANTY.

DIAGRAMS FOR ADJUSTABLE BRACELET WATCHES

1. CLASP EXTENDER

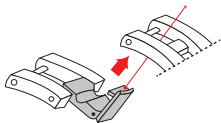


2. ONE SCREW SYSTEM

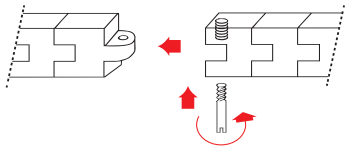


3. TWO SCREW SYSTEM

Screw in one at a time

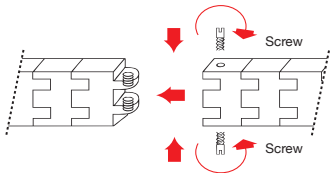


4. CONNECTION SYSTEM

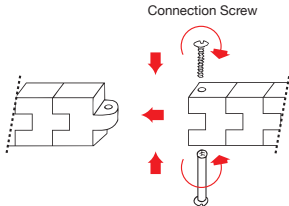


Use 2 screwdrivers. Hold one side steady before turning the screw.

5. METAL INSERT

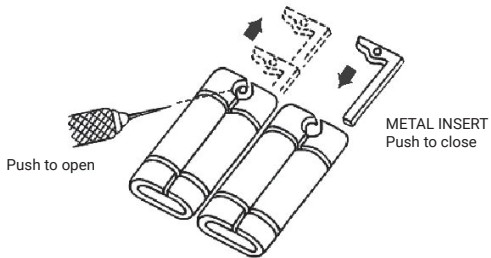

6. HAIRCLIP PIN

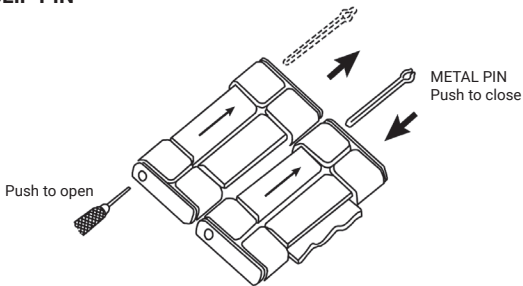

Turn over the watch to look for arrows on the underside of the links, showing you which way you need to push the pin out of the link. Use a pin remover tool to push out the "hair clip pin" from the hole located on the side of the link. After the links are removed, simply follow these steps in reverse to re-assemble the bracelet.


7. PIN & TUBE 1



Side view "B" of Link




Side view "A" of Link

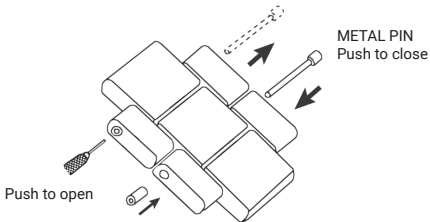



Check the side edge of the watch link, to determine which side of the link is "A" or "B". Take a pin remover tool and push out the pin from the hole located on side "B". After the desired links are removed, simply follow these steps in reverse to re-assemble the bracelet.

8. PIN & TUBE 2

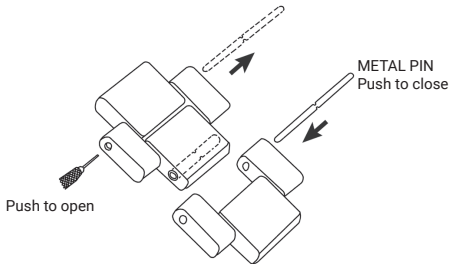


In order to adjust links for this watch construction, you must switch the pin on the tool kit to the longest pin (approximately 10mm long) found under the tool kit. Then use the pin remover tool to push out the pins from either side of the links. After the desired links are removed, simply follow these steps in reverse to re-assemble the bracelet.

9. SLIDING BAR

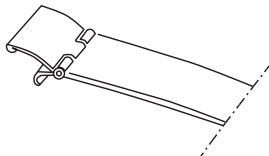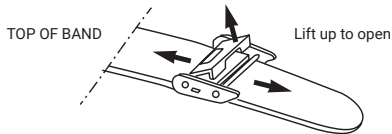


Slide along for adjustment
(Push down when done)

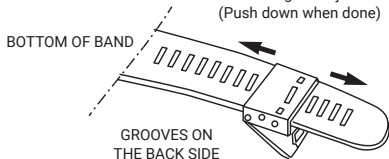


Align protruded line inside the sliding part with desired groove in band

10. FOLD-OVER BUCKLE


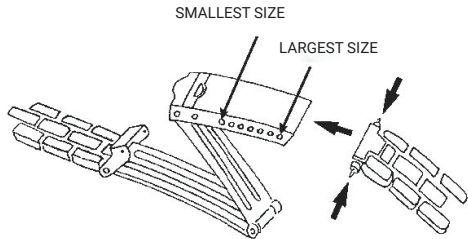


Compress the push pin, and put the ends into the suitable holes along the buckle.

11. MESH BAND ADJUSTMENT

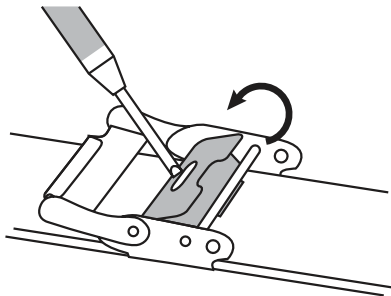

1. Place the tip of a small screwdriver or adjustment tool into the slot on the clasp. Gently exert pressure down on the screwdriver and pry the top portion on the clasp open.

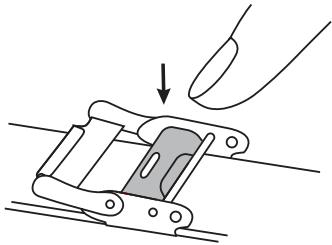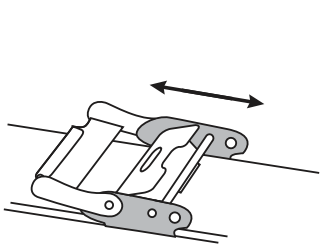

2. Slide the clasp up or down the mesh strap to adjust the band for the size of your wrist. When the proper fit for your wrist has been obtained, align the back of the clasp with the corresponding groove in the mesh watch strap.
3. Press the slotted clasp back down to securely close it.


1. TO UPDATE YOUR BOXSET:

CHANGING THE STRAPS

To remove the Strap, place the watch face down on a soft, flat surface. Slide the Strap Lever to the left and pull the Strap away from the watch.

TO INSERT THE NEW STRAP


Set Strap Pin into the Left Pin Groove. Slide the Strap Lever to the left. Align the Strap so the Right Pin “clicks” into the Right Pin Groove when the Lever is released.

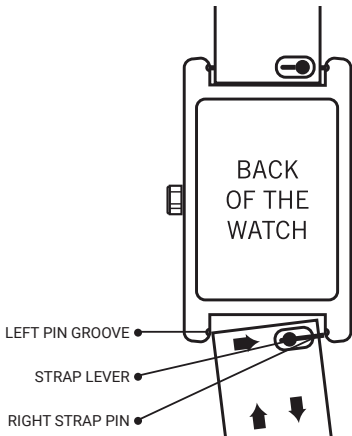

2. TO UPDATE YOUR BOXSET:

CHANGING THE BEZEL

To remove the Bezel, turn the Bezel counterclockwise until you can lift the Bezel from the watch. Place the new Bezel over the Watch Case and turn the Bezel clockwise until the Bezel is tight.

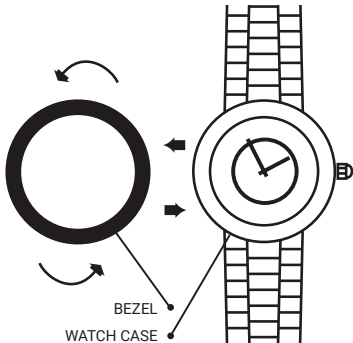


3. TO UPDATE YOUR BOXSET:

CHANGING THE BEZEL AND BRACELET

To remove the Bezel, turn the Bezel counterclockwise until you can lift the Bezel from the watch.

Hold the Watch upright and unhook the Bracelet. Hook on the new Bracelet.

Place the new Bezel over the Watch Case and turn the Bezel clockwise until the Bezel is tight.

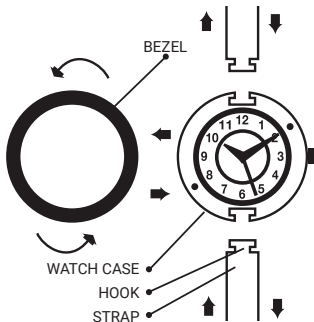

Dear Customer:

Help your watch/jewelry retailer protect our environment by properly recycling the button cell battery in your watch. Professional jewelers and watch retailers are best equipped to replace the battery in your watch without damage to the watch case and movement inside. They have the specialized tools and experience to do the job right. Inexperienced people can scar the case and damage the water resistant seal – voiding your warranty. It is important to recycle your watch battery in an environmentally safe way. Watch batteries contain very small amounts of mercury, which is required to prevent corrosion of the battery and damage to your watch. There is no danger to you or your watch from the mercury because it is in the sealed battery. But you need to recycle your watch battery properly. Your professional watch/jewelry retailer is the best person to do this for you. These professionals collect used batteries and recycle them through licensed waste management companies.

Do our environment and your watch a favor. Ask your watch/jewelry professional to replace your battery when it expires.

Requires (1) silver oxide)(1.55 volt) battery included

**TO RETURN YOU WATCH FOR SERVICING:
RETURN IT TO ANNE KLEIN CO. OR TO AN AUTHORIZED SERVICE CENTER;
IT SHOULD NOT BE RETURNED TO PLACE OF PURCHASE.**

Carefully pack you watch in a sturdy box (do not send in a gift box for same will not be returned) and mail to:

ANNE KLEIN WATCHES

6015 Little Neck Parkway
Little Neck, NY 11362

ATTN: Service Dept.

Tel: +1 718 482-4195

Email: servicedept@egluck.com

Clarity Ltd.

Flat A- B, 12/F,
Sing Mei Industrial Building
29-37 Kwai Wing Road
Kwai Chung, N.T. Hong Kong

Tel: 852.2424.2211

Fax: 852.2424.2077

Email: service@egc-clarity.com

Because of possible loss, we recommend that you insure your watch, return receipt requested, when using the mail. If your watch requires cleaning, lubrication, battery changing, or needs a crystal replaced, ANNE KLEIN approved Service Centers may be available in your area. These repair facilities use ANNE KLEIN parts and components to assure quality and future performance. Free estimates are available in advance, should you need servicing or repairs not covered under the warranty. Repairs covered under the warranty may require proof of purchase, so retain the purchase receipt. For further information regarding ANNE KLEIN approved Service Stations and locations, please call the Service Centers listed above.

2 YEAR LIMITED WARRANTY

This Anne Klein Watch is warranted to you, the owner, for 2 years against all defects in material or workmanship. This warranty does not apply to normal wear and tear or abuse and excludes batteries, case, strap, crystal, or bracelet. In the event of a defect or malfunction of the movement within this period it will be repaired or replaced, at our option. No additional charge will be made unless additional servicing is necessary for reasons beyond our control such as accident, misuse, neglect or replacement of parts not warranted is required such as case, crystal, strap, bracelet or batteries in which event a moderate charge will be made.

The aforementioned remedy is exclusive. ANNE KLEIN shall not be liable for any incidental or consequential damages. Should any other part of your watch require repair, please use our Service Centers for quick and inexpensive repairs on your watch. This warranty gives you specific legal rights and you may also have other rights which may vary from country to country.

EU Representative: 24hour-AR
Van Nelleweg 1
3044 BC Rotterdam
The Netherlands
compliance@24hour-ar.com

UK Representative: 24hour-AR
15 Beaufort Court Admirals
Way Canary Wharf, London
United Kingdom E14 9XL
compliance@24hour-ar.com

* SPECIFICATIONS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE FOR PRODUCT
IMPROVEMENT, DESIGN MAY VARY DEPENDING ON THE MODEL.



