


**ANNE KLEIN**

**INSTRUKTIONER OCH  
2-ÅRS BEGRÄNSAD GARANTI**

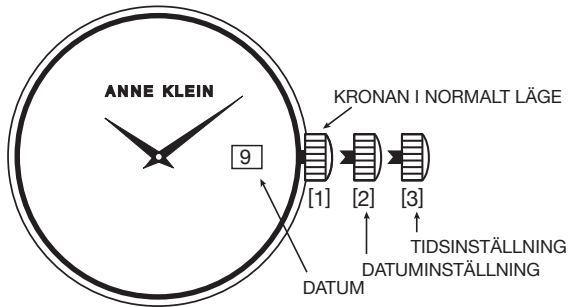

## **TIDSINSTÄLLNING**

Dra ut kronan hela vägen tills det tar stopp (position "3") och minutvisaren stannar. Vrid kronan i endera riktningen och ställ in önskad tid. Tryck in kronan helt (position "1") för att återaktivera tidtagningen. Minutvisaren börjar då åter att börja röra sig.

**OBS! Dra aldrig ut kronan när klockan är våt.**

## **INSTÄLLNING AV TID DAG OCH DATUM**

Om din klocka har ett datum-eller ett dag-och-datumfönster, dra ut kronan till position "2" och vrid kronan i båda riktningarna tills dagen före önskat datum visas. Dra ut kronan hela vägen (position "3") och vrid kronan för att flytta fram tiden. När midnatt nås kommer datumet att ändras till önskat datum. Fortsätt vrida kronan tills önskad tid uppnås. Tryck tillbaka kronan hela vägen in (position "1") för att återaktivera tiden.

## **VATTENTÅLIGHET**

Om din klocka är vattentät har den testats för att vara vattentät för ett tryck på 3-5 atmosfärer (100-165 fot).

**OBS! Med tiden kan höljets packningar bli slitna och minska klockans vattenmotstånd. En kvalificerad specialist bör byta packningar och 0-ring varje gång batteriet byts. För att undvika oönskad kondens bör alla klockor, oavsett specifikation (vattentåliga eller inte), inte utsättas för extrema temperaturer såsom kyla eller värme.**

## **BATTERIBYTE**


Byt batteri när klockan går långsamt eller slutar fungera, displayen mörknar eller intesyns, eller om bakgrundsbelysningen inte fungerar. Byt ut mot ett nytt batteri av samma eller motsvarande typ.

**OBS! Batteribyte bör utföras av en kvalificerad tekniker som samtidigt kan kontrollera packningarnas skick.**


**BATTERIER TÄCKS INTE AV GARANTIN.**

# DIAGRAM FÖR JUSTERBARA KLOCKARBAND

## 1. SNÄPPFÄSTESFÖRLÄNGARE

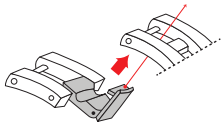


## 2. ENSKRUVSYSTEM

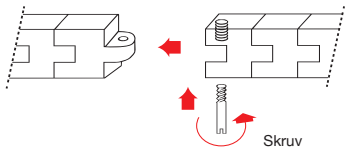


### 3. TVÅSKRUVSYSTEM

Skruva in en i taget.

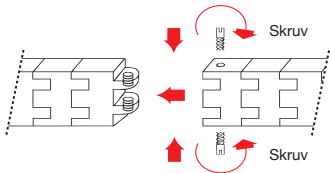


### 4. FÄSTNINGSSYSTEM

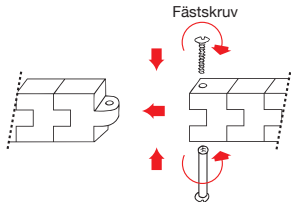


Använd två skruvmejslar. Håll ena sidan stadigt innan du vrider skruven.

## 5. METALLSTIFT

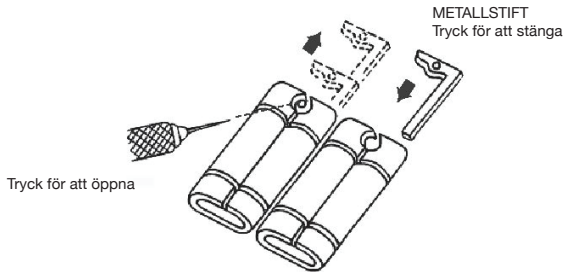

## 6. HÅRKLÄMMESTIFT

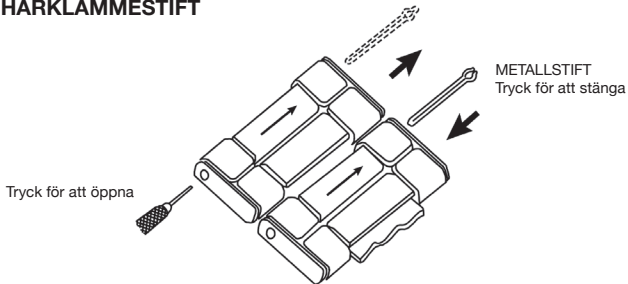

Vänd på klockan för att se pilarna på undersidan av länkarna, de visar dig åt vilket håll du ska trycka ut stiftet ur länken. Använd ett stiftborttagningsverktyg för att trycka ut "Hårklämmestiftet" från hålet på sidan av länken. När länkarna har tagits bort, följ stegen i omvänd ordning för att återställa armbandet.


## 7. STIFT OCH HYLSA 1



Sidovy **"B"** av Länk




Sidovy **"A"** av Länk

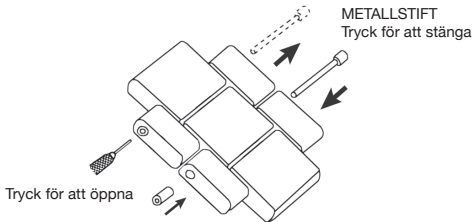




Kontrollera sidan på klocklänken för att avgöra vilken sida av länken som är **"A"** eller **"B"**. Använd ett stiftborttagningsverktyg för trycka ut stiftet från hålet på sidan **"B"**. När länkarna har tagits bort, följ stegen i omvänd ordning för att återställa armbandet.

## 8. STIFT OCH HYLSA 2

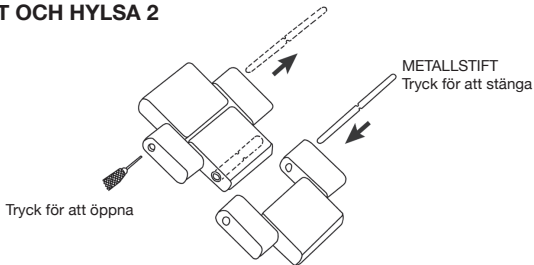


För att justera länkarna i denna klockkonstruktion måste du byta stiftet på verktygssatsen till det längsta stiftet (cirka 10 mm långt) som finns under verktygssatsen. Använd sedan stiftborttagningsverktyget för att trycka ut stiftet från vardera sidan av länkarna. När länkarna har tagits bort, följ stegen i omvänd ordning för att återställa armbandet.

## 9. SKJUSPÄNNE

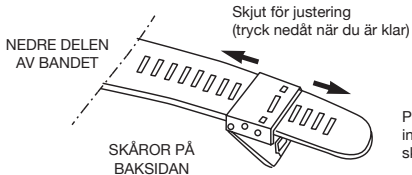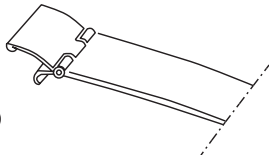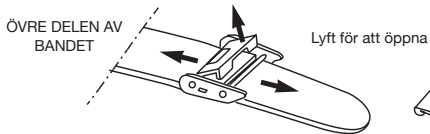


Passa in den utskjutande linjen  
inuti skjutspännet i önskad  
skåra i bandet

## 10. VIKSPÄNNE


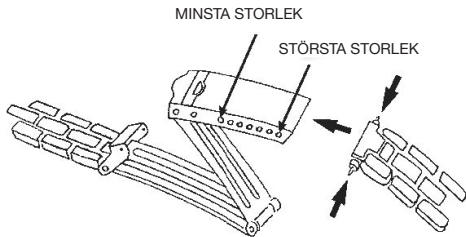


Tryck ihop pushpin-stiftet och fäst ändarna i önskat håll längs spännet.

## JUSTERING AV MESHBAND

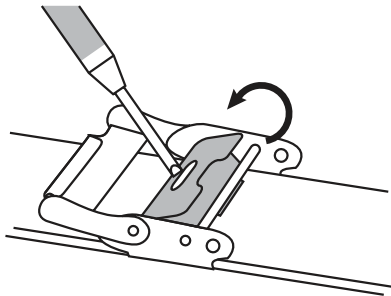

1. Placera spetsen på en liten skruvmejsel eller justeringsverktyg i skåran på spännet. Tryck försiktigt nedåt med skruvmejseln och bänd upp den övre delen av spännet.

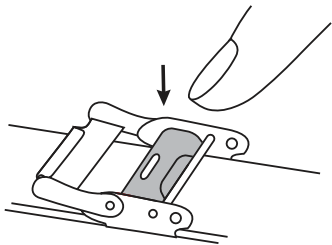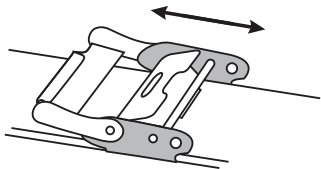

2. Skjut spännet uppåt eller nedåt längs meshbandet för att justera bandet efter handledens storlek. När du har rätt passform för din handled, passa in baksidan av spännet i motsvarande skåra i meshbandet.

3. Tryck det slitsade spännet nedåt för att fästa det ordentligt.


## 1. UPPDATERA DITT BOXSET:

### BYTE AV ARMBAND

För att ta bort armbandet, placera klockan med urtavlan nedåt på en mjuk, plan yta. Skjut armbandsspaken åt vänster och dra bort armbandet från klockan.

### FÄSTNING AV NYTT ARMBAND


Passa in armbandsstiftet i det vänstra stiftfästet. Skjut armbandsspaken åt vänster. Rikta in armbandet så att det "klickar" i höger stiftfäste. Släpp stiftets högra ände.

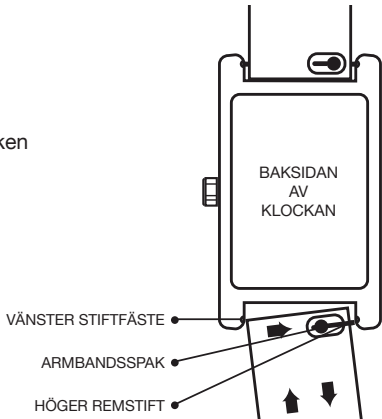

## 2. UPPDATERA DITT BOXSET:

### BYTE AV GLASRING

För att ta bort glasringen, vrid glasringen moturs till du kan lyfta bort den från klockan. Placera den nya glasringen över boetten och vridglasringen medurs tills den sitter fast.

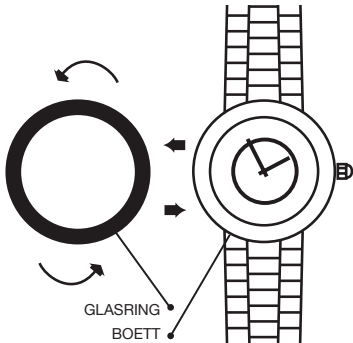


### 3. UPPDATERA DITT BOXSET:

#### BYTE AV GLASRING OCH STELT ARMBAND

För att ta bort glasringen, vrid glasringen moturs till du kan lyfta bort den från klockan.

Håll klockan upprätt och haka av det stela armbandet.

Haka på det nya armbandet.  
Placera den nya glasringen  
över boetten och vrid ramen  
medurs tills den sitter fast.

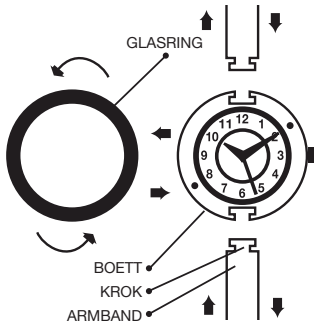

## **Bäste/Bästa kund:**

Hjälp din klock-/smyckeåterförsäljare att skydda vår miljö genom att korrekt återvinna knappcells batteriet i din klocka. Professionella juvelerare och klockhandlare är bäst utrustade för att byta batteriet i din klocka utan att skada boetten och mekaniken inuti. De har rätt specialistverktyg och erfarenhet för att göra jobbet rätt. Oerfarna personer kan skada boetten och skada den vattentäta tätningen -vilket ogiltigförklarar din garanti. Det är viktigt att du återvinner ditt klockbatteri på ett miljösäkert sätt. Din professionella klock-/smyckeåterförsäljare är bäst lämpad att göra detta åt dig. Där samlar de in använda batterier och återvinner dem via licensierade avfallshanteringsföretag. Gör vår miljö och din klocka en tjänst. Be din klock-/smyckeåterförsäljare att byta ut ditt batteri när det tagit slut.

Kräver (1) silveroxid (1,55 volt) batteri, vilket ingår

**FÖR ATT RETURNERA DIN KLOCKA FÖR SERVICE RETURNERA  
DEN TILL ANNE KLEIN WATCH CO ELLER TILL ETT AUKTORISERAT  
SERVICECENTER, DEN SKA INTE RETURNERAS TILL ÅTERFÖRSÄLJAREN**

Förpacka försiktigt din klocka i en stadig kartong (skicka inte i presentförpackningen, den kommer inte att returneras) och skicka till,

ANNE KLEIN WATCHES  
6015 Little Neck Parkway  
Little Neck, NY 11362  
ATTN: Service Dept.  
Tel: +1 718 482-4195  
Email: [servicedept@egluck.com](mailto:servicedept@egluck.com)

Clarity Ltd.  
Flat A-B, 12/F,  
Sing Mei Industrial Building  
29-37 Kwai Wing Road  
Kwai Chung, N.T. Hong Kong  
Tel: 852.2424.2211  
Fax: 852.2424.2077  
Email: [senrice@egc-clarity.com](mailto:senrice@egc-clarity.com)

På grund av risk för eventuell förlust rekommenderar vi att du försäkrar din klocka och begär returkvitto när du postar den. Om din klocka kräver rengöring, smörjning, batteribyte eller om en kristall behöver bytas ut, kan ett ANNE KLEIN-godkänt servicecenter finnas tillgängligt i ditt område. Dessa servicecenter använder ANNE KLEIN-delar och komponenter för att säkerställa kvalitet och framtida prestanda. Kostnaduppskattningar görs i förväg för all service eller reparation som inte täcks av garantin. Reparationer som omfattas av garantin kan kräva inköpsbevis, så se till att spara inköpskvittot. För ytterligare information om ANNE KLEIN-godkända servicecenter och platser, kontakta de servicecentra som anges ovan.

## **2 ÅRS BEGRÄNSAD GARANTI**

Denna ANNE KLEIN klocka är garanterad dig, ägaren, i 2 år och gäller alla material-eller tillverkningsdefekter. Denna garanti gäller inte normalt slitage eller missbruk och exkluderar batterier, fodral, kristall eller armband. I händelse av en defekt eller ett mekaniskt funktionsfel inom denna period kommer klockan att repareras eller bytas ut, efter vårt eget val. Ingen extra kostnad kommer att tas ut om inte ytterligare service är nödvändig av skäl som ligger utanför vår kontroll, såsom olycka, missbruk, försummelse eller behov av utbyte av delar som inte täcks av garantin, såsom fodral, kristall, armband eller batterier, i vilket fall en rimlig kostnad kommer att debiteras. Ovannämnda åtgärd är exklusiv. ANNE KLEIN ansvarar inte för några oförutsedda skador eller följdskador. Om någon annan del av din klocka behöver repareras, använd våra servicecenter för snabb och billig reparation av din klocka. Denna garanti ger dig specifika juridiska rättigheter och du kan även ha andra rättigheter, vilka kan variera från land till land.

EU Representative: 24hour-AR  
Van Nelleweg 1  
3044 BC Rotterdam  
The Netherlands  
compliance@24hour-ar.com

UK Representative: 24hour-AR  
15 Beaufort Court Admirals Way  
Canary Wharf, London  
United Kingdom E14 9XL  
compliance@24hour-ar.com


**\* SPECIFIKATIONEN KAN ÄNDRAS UTAN FÖREGÅENDE  
MEDDELANDE FÖR PRODUKTFÖRBÄTTRINGAR.  
DESIGNEN KAN VARIERA BEROENDE PÅ MODELL.**





**ANNE KLEIN**

**WATCH INSTRUCTIONS &  
2-YEAR LIMITED WARRANTY**

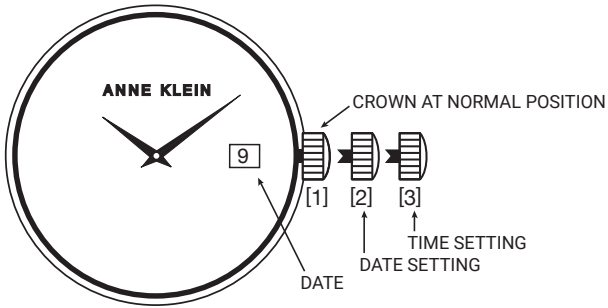

## **SETTING THE TIME**

Pull out Crown all the way until it stops (position '3'). The second hand will stop. Rotate the Crown in either direction until desired time is obtained. Push Crown back in all the way (position '1') to re-engage time keeping. Second hand will begin to move.

***NOTE: Never pull the Crown when the watch is wet.***

## **SETTING THE TIME, DAY AND DATE**

If your watch has a Date or a Day and Date Window, pull the Crown out to position '2' and turn the Crown in both directions until the Date showing is the day before the desired Date. Pull out Crown all the way (position '3') and turn the Crown to advance time. When midnight is reached, the Date will advance to the desired Date. Continue to turn the Crown until desired time is obtained. Push the Crown back in all the way until it stops (position '1') to re-engage time keeping.

## **WATER RESISTANCE**

If your watch is water resistant, the watch is tested to be water resistant to 3-5 atmospheres (100-165 feet).

***NOTE: Over time, the gaskets of the case may become worn and reduce the water resistance of the watch. A trained specialist should change the gaskets and the O-ring each time the battery is changed. To avoid any unwanted condensation, watches of all specifications (water resistant or not) should not be exposed to extreme temperatures such as cold or heat.***

## **CHANGING THE BATTERY**


Replace batteries when the watch becomes slow or does not operate, the readout darkens or does not appear or the backlight fails. Replace with same or equivalent.

***NOTE: Battery change should be performed by a qualified technician who should also check the condition of the gaskets at the same time.***


**BATTERIES ARE NOT COVERED UNDER WARRANTY.**

## DIAGRAMS FOR ADJUSTABLE BRACELET WATCHES

### 1. CLASP EXTENDER

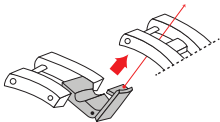


### 2. ONE SCREW SYSTEM

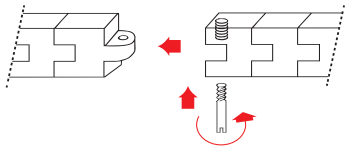


### 3. TWO SCREW SYSTEM

Screw in one at a time

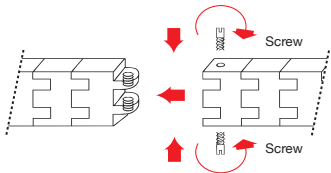


### 4. CONNECTION SYSTEM

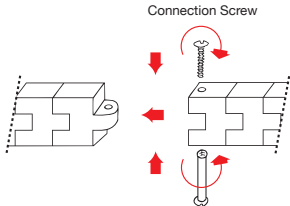


Use 2 screwdrivers. Hold one side steady before turning the screw.

## 5. METAL INSERT

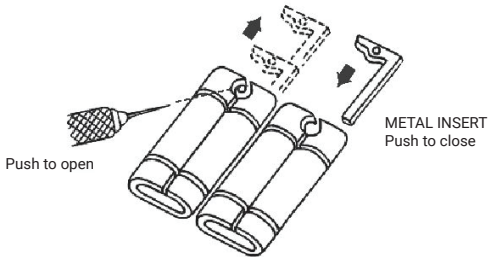

## 6. HAIRCLIP PIN

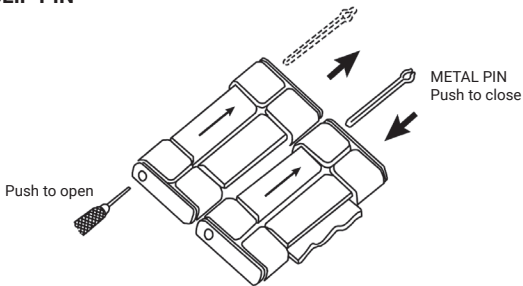

Turn over the watch to look for arrows on the underside of the links, showing you which way you need to push the pin out of the link. Use a pin remover tool to push out the "hair clip pin" from the hole located on the side of the link. After the links are removed, simply follow these steps in reverse to re-assemble the bracelet.


## 7. PIN & TUBE 1



Side view "B" of Link




Side view "A" of Link

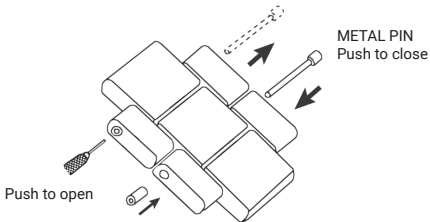



Check the side edge of the watch link, to determine which side of the link is "A" or "B". Take a pin remover tool and push out the pin from the hole located on side "B". After the desired links are removed, simply follow these steps in reverse to re-assemble the bracelet.

## 8. PIN & TUBE 2

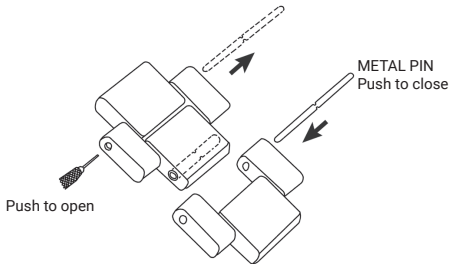


In order to adjust links for this watch construction, you must switch the pin on the tool kit to the longest pin (approximately 10mm long) found under the tool kit. Then use the pin remover tool to push out the pins from either side of the links. After the desired links are removed, simply follow these steps in reverse to re-assemble the bracelet.

## 9. SLIDING BAR

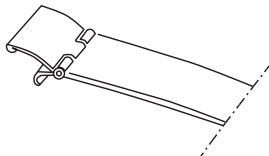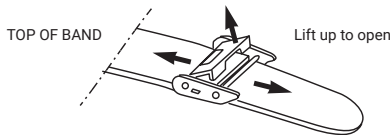


Slide along for adjustment  
(Push down when done)

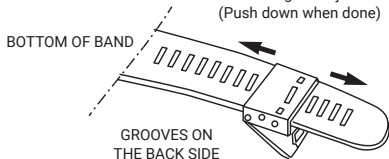


Align protruded line inside the sliding part with desired groove in band

## 10. FOLD-OVER BUCKLE


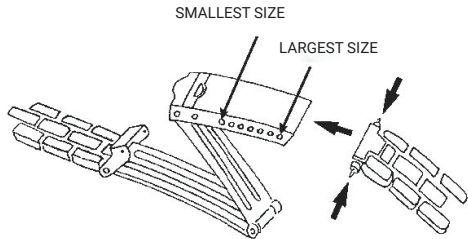


Compress the push pin, and put the ends into the suitable holes along the buckle.

## 11. MESH BAND ADJUSTMENT

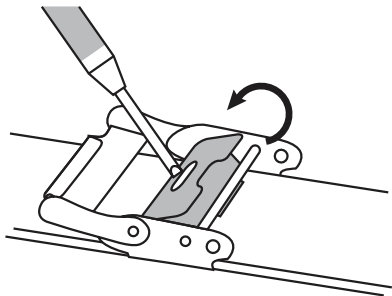

1. Place the tip of a small screwdriver or adjustment tool into the slot on the clasp. Gently exert pressure down on the screwdriver and pry the top portion on the clasp open.

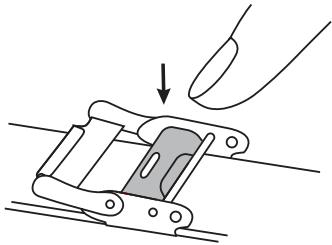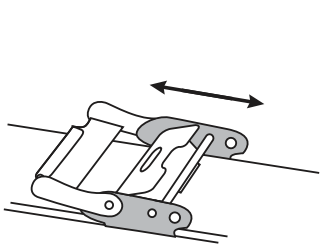

2. Slide the clasp up or down the mesh strap to adjust the band for the size of your wrist. When the proper fit for your wrist has been obtained, align the back of the clasp with the corresponding groove in the mesh watch strap.
3. Press the slotted clasp back down to securely close it.


## 1. TO UPDATE YOUR BOXSET:

### CHANGING THE STRAPS

To remove the Strap, place the watch face down on a soft, flat surface. Slide the Strap Lever to the left and pull the Strap away from the watch.

### TO INSERT THE NEW STRAP


Set Strap Pin into the Left Pin Groove. Slide the Strap Lever to the left. Align the Strap so the Right Pin “clicks” into the Right Pin Groove when the Lever is released.

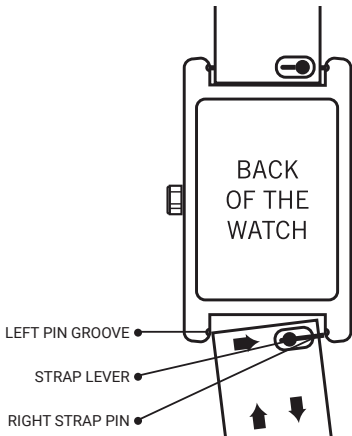

## 2. TO UPDATE YOUR BOXSET:

### CHANGING THE BEZEL

To remove the Bezel, turn the Bezel counterclockwise until you can lift the Bezel from the watch. Place the new Bezel over the Watch Case and turn the Bezel clockwise until the Bezel is tight.

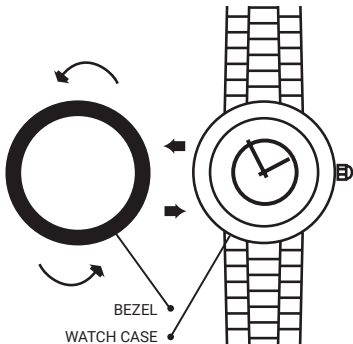


### 3. TO UPDATE YOUR BOXSET:

#### CHANGING THE BEZEL AND BRACELET

To remove the Bezel, turn the Bezel counterclockwise until you can lift the Bezel from the watch.

Hold the Watch upright and unhook the Bracelet. Hook on the new Bracelet.

Place the new Bezel over the Watch Case and turn the Bezel clockwise until the Bezel is tight.

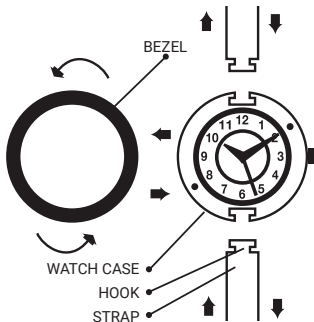

**Dear Customer:**

Help your watch/jewelry retailer protect our environment by properly recycling the button cell battery in your watch. Professional jewelers and watch retailers are best equipped to replace the battery in your watch without damage to the watch case and movement inside. They have the specialized tools and experience to do the job right. Inexperienced people can scar the case and damage the water resistant seal – voiding your warranty. It is important to recycle your watch battery in an environmentally safe way. Watch batteries contain very small amounts of mercury, which is required to prevent corrosion of the battery and damage to your watch. There is no danger to you or your watch from the mercury because it is in the sealed battery. But you need to recycle your watch battery properly. Your professional watch/jewelry retailer is the best person to do this for you. These professionals collect used batteries and recycle them through licensed waste management companies.

Do our environment and your watch a favor. Ask your watch/jewelry professional to replace your battery when it expires.

Requires (1) silver oxide )(1.55 volt) battery included

**TO RETURN YOU WATCH FOR SERVICING:  
RETURN IT TO ANNE KLEIN CO. OR TO AN AUTHORIZED SERVICE CENTER;  
IT SHOULD NOT BE RETURNED TO PLACE OF PURCHASE.**

Carefully pack you watch in a sturdy box (do not send in a gift box for same will not be returned) and mail to:

ANNE KLEIN WATCHES

6015 Little Neck Parkway  
Little Neck, NY 11362

ATTN: Service Dept.

Tel: +1 718 482-4195

Email: [servicedept@egluck.com](mailto:servicedept@egluck.com)

Clarity Ltd.

Flat A- B, 12/F,  
Sing Mei Industrial Building  
29-37 Kwai Wing Road  
Kwai Chung, N.T. Hong Kong

Tel: 852.2424.2211

Fax: 852.2424.2077

Email: [service@egc-clarity.com](mailto:service@egc-clarity.com)

Because of possible loss, we recommend that you insure your watch, return receipt requested, when using the mail. If your watch requires cleaning, lubrication, battery changing, or needs a crystal replaced, ANNE KLEIN approved Service Centers may be available in your area. These repair facilities use ANNE KLEIN parts and components to assure quality and future performance. Free estimates are available in advance, should you need servicing or repairs not covered under the warranty. Repairs covered under the warranty may require proof of purchase, so retain the purchase receipt. For further information regarding ANNE KLEIN approved Service Stations and locations, please call the Service Centers listed above.

## **2 YEAR LIMITED WARRANTY**

This Anne Klein Watch is warranted to you, the owner, for 2 years against all defects in material or workmanship. This warranty does not apply to normal wear and tear or abuse and excludes batteries, case, strap, crystal, or bracelet. In the event of a defect or malfunction of the movement within this period it will be repaired or replaced, at our option. No additional charge will be made unless additional servicing is necessary for reasons beyond our control such as accident, misuse, neglect or replacement of parts not warranted is required such as case, crystal, strap, bracelet or batteries in which event a moderate charge will be made.

The aforementioned remedy is exclusive. ANNE KLEIN shall not be liable for any incidental or consequential damages. Should any other part of your watch require repair, please use our Service Centers for quick and inexpensive repairs on your watch. This warranty gives you specific legal rights and you may also have other rights which may vary from country to country.

EU Representative: 24hour-AR  
Van Nelleweg 1  
3044 BC Rotterdam  
The Netherlands  
compliance@24hour-ar.com

UK Representative: 24hour-AR  
15 Beaufort Court Admirals  
Way Canary Wharf, London  
United Kingdom E14 9XL  
compliance@24hour-ar.com

\* SPECIFICATIONS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE FOR PRODUCT IMPROVEMENT, DESIGN MAY VARY DEPENDING ON THE MODEL.



