


ANNE KLEIN

時計の説明書と2年間の限定保証

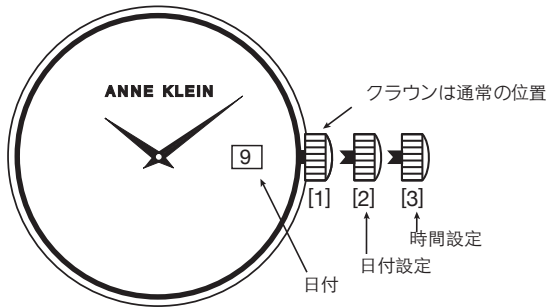

ANNE KLEIN

9

クラウンは通常的位置

[1]

[2]

[3]

日付

日付設定

時間設定

時間を設定する

リューズを最後まで引き出して（位置「3」）、秒針が止まります。希望の時刻になるまで、リューズをいずれかの方向に回します。リューズを完全に押し戻すと（位置「1」）、再び時刻表示がオンになります。秒針が動き始めます。

注意: 時計が濡れているときは絶対にリューズを引かないでください。

時間、曜日、日付の設定

時計に日付表示または曜日と日付のウィンドウがある場合は、クラウンを「2」の位置まで引き出し、日付が希望の日付の前日になるまで両方向に回します。クラウンを完全に引き出し（「3」の位置）、クラウンを回して時間を進めます。真夜中になると、日付が希望の日付に進みます。希望の時刻になるまでクラウンを回し続けます。クラウンが止まるまで完全に押し戻し（「1」の位置）、時刻表示を再開します。

耐水性

時計が防水仕様の場合、3~5気圧（100~165フィート）までの防水性がテストされています。

注意: 時間の経過とともにケースのガスケットが摩耗し、時計の耐水性が低下する場合があります。電池を交換するたびに、熟練した専門家がガスケットとOリングを交換する必要があります。不要な結露を避けるため、すべての仕様（防水かどうかに関係なく）の時計を寒さや暑さなどの極端な温度にさらさないでください。

バッテリーの交換


時計の動作が遅くなったり、動作しなくなったり、表示が暗くなったり、表示されなくなったり、バックライトが点灯しなくなったりした場合は、電池を交換してください。同じ電池または同等の電池と交換してください。

注意: バッテリーの交換は資格を持った技術者が行う必要があります、同時にガスケットの状態も確認する必要があります。


バッテリーは保証の対象外となります。

調節可能なブレスレットウォッチの図

1. クラスプエクステンダー

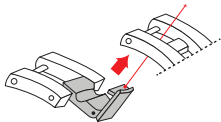


2. ワンスクリューシステム

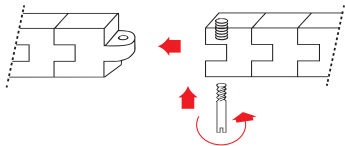


3. 2本のネジシステム

一度に1本ずつねじ込みます。

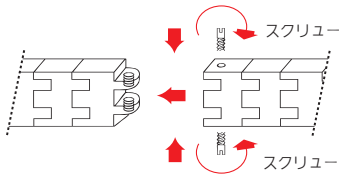


4. 接続システム

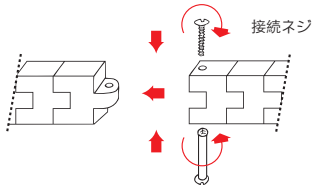


ドライバーを2本使用します。ネジを回す前に片側をしっかりと押さえてください。

5. 金属インサート

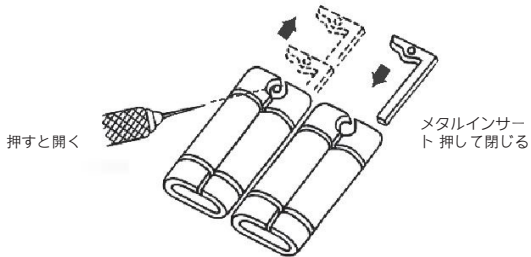

6. ヘアクリップピン

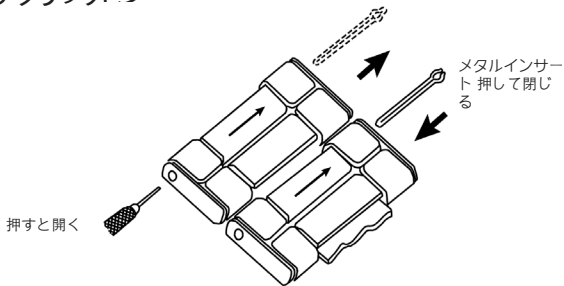

時計を裏返し、リンクの裏側にある矢印を探します。リンクからピンを押し出す方向が示されています。ピン取り外しツールを使用して、リンクの側面にある穴から「ヘアクリップピン」を押し出します。リンクを取り外した後は、これらの手順を逆に実行してプレスレットを組み立て直します。


7. ピン&チューブ1



リンクの側面図「B」




リンクの側面図「A」

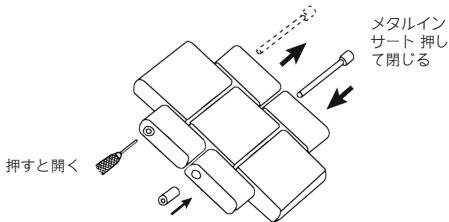




時計のリンクの側面の端をチェックして、リンクのどちら側が「A」か「B」かを判断します。ピン取り外しツールを取り、ピンを「B」側にある穴から押し出します。必要なリンクを取り外したら、これらの手順を逆に実行してブレスレットを組み立て直します。

8. ピン&チューブ2

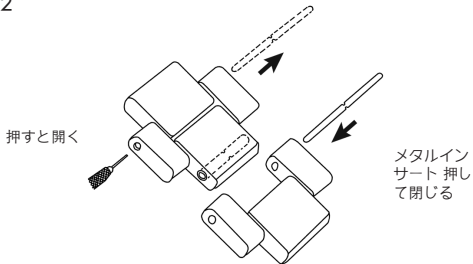


この時計の構造のリンクを調整するには、ツールキットの一番長いピン（長さ約 10 mm）にピンを差し込みます。次に、ピン取り外しツールを使用して、リンクの両側からピンを押し出します。必要なリンクを取り外したら、これらの手順を逆に実行してプレスレットを組み立て直します。

9. スライダー

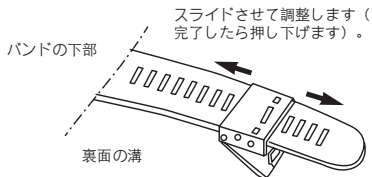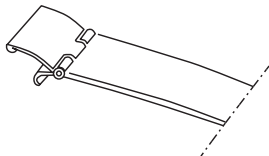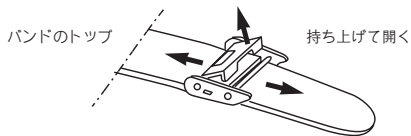


スライド部内の突出線をバンドの希望の溝に合わせる

10. 折り返しバックル


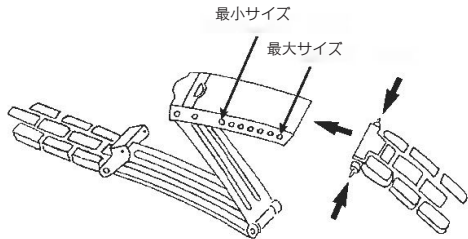


押しピンを圧縮し、端をバックルに沿った適切な穴に差し込みます。

メッシュバンド調整

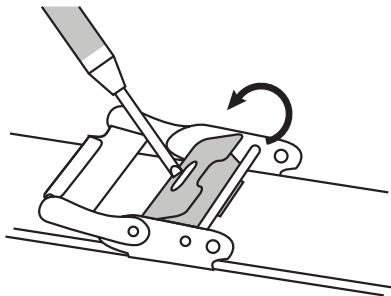

1. 小さなドライバーまたは調整ツールの先端を留め具のスロットに挿入します。ドライバーに軽く圧力をかけ、留め具の上部をこじ開けます。

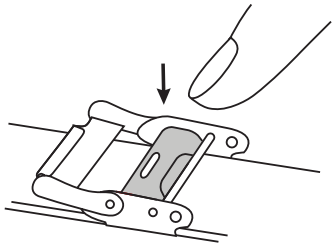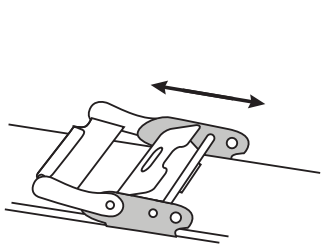

2. 留め具をメッシュストラップの上下にスライドさせて、手首のサイズに合わせてバンドを調整します。手首にぴったりフィットしたら、留め具の裏側をメッシュウオッチストラップの対応する溝に合わせます。

3. スロット留め具を押し下げてしっかりと閉じます。


1. ボックスセットを更新するには:

ストラップの交換

ストラップを外すには、時計の文字盤を下にして、柔らかく平らな面に置きます。ストラップレバーを左にスライドし、ストラップを時計から引き離します。

新しいストラップを挿入するには


ストラップピンを左のピン溝にセットします。ストラップレバーを左にスライドします。レバーを放したときに右のピンが右のピン溝に「カチツ」と収まるようにストラップの位置を合わせます。

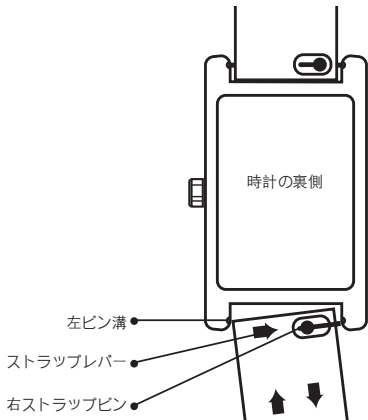

2. ボックスセットを更新するには:

ベゼルの交換

ベゼルを取り外すには、ベゼルを時計から持ち上げられるまで反時計回りに回します。新しいベゼルを時計ケースの上に置き、ベゼルがしっかりと固定されるまで時計回りに回します。

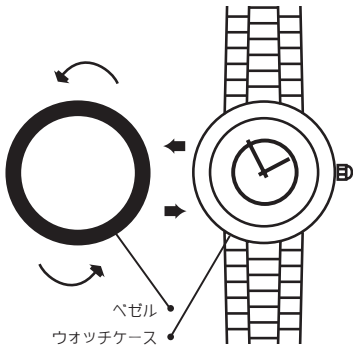


3. ボックスセットを更新するには

ベゼルとプレスレットの交換

ベゼルを取り外すには、ベゼルの時計から持ち上げられるまで反時計回りに回します。

時計を垂直に持ち、プレスレットを外します。新しいプレスレットを取り付けます。

新しいベゼルの時計ケースの上に置き、ベゼルがしっかりと締まるまで時計回りに回します。

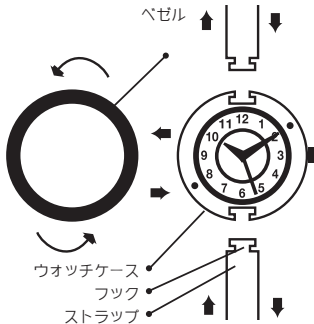

お客様各位：

時計のボタン電池を適切にリサイクルすることで、時計/ジュエリー販売店が環境を保護するのを手伝ってください。プロの宝石商や時計販売店は、時計のケースや内部のムーブメントに損傷を与えることなく時計の電池を交換するのに最適な設備を備えています。彼らは仕事を正しく行うための特殊なツールと経験を持っています。経験の浅い人が行くと、ケースに傷をつけたり、防水シールを破損したりして、保証が無効になる可能性があります。時計の電池は環境に安全な方法でリサイクルすることが重要です。時計の電池には、電池の腐食や時計の損傷を防ぐために必要な微量の水銀が含まれています。水銀は密封された電池に含まれているため、あなたや時計に危険はありません。ただし、時計の電池は適切にリサイクルする必要があります。プロの時計/ジュエリー販売店は、この作業に最適な人です。これらの専門家は、使用済みの電池を収集し、認可された廃棄物管理会社を通じてリサイクルします。

環境とあなたの時計のためにも、電池切れになったら時計/宝石の専門家に電池交換を依頼してください。

酸化銀電池（1.55ボルト）1個が必要

時計を修理のために返品する場合: 購入場所に返品せず、
ANNE KLEIN WATCH CO. または認定サービスセンターに返品し
てください。

時計を丈夫な箱に丁寧に梱包し（ギフトボックスでは返送できませんので、ギフトボックスで送らないでください）、次の住所に郵送してください。

ANNE KLEIN WATCHES
6015 Little Neck Parkway
Little Neck, NY 11362
ATTN: Service Dept.
Tel: +1 718 482-4195
Email: servicedept@egluck.com

認定サービスセンター:

Clarity Ltd.
Flat A-B, 12/F,
Sing Mei Industrial Building
29-37 Kwai Wing Road
Kwai Chung, N.T. Hong Kong
Tel: 852.2424.2211
Fax: 852.2424.2077
Email: senrice@egc-clarity.com

Baode Watch (Shen Zhen) Co. Ltd
3/F, 56 Mei Bao Road, Xin Qiao Tang
Ind. Zone, Da Lang, Longhua
District, Shenzhen, China 518109
Tel: 86 755-28112770

紛失の可能性があるため、郵送で時計をお送りいただく際は、受領証を要求して時計に保険をかけることをお勧めします。時計のクリーニング、注油、電池交換、またはクリスタルの交換が必要な場合は、お住まいの地域で ANNE KLEIN 認定のサービスセンターをご利用いただけます。これらの修理施設では、品質と将来の性能を保証するために ANNE KLEIN の部品とコンポーネントを使用しています。保証対象外のサービスや修理が必要な場合は、事前に無料で見積もりをお受けいただけます。保証対象の修理には購入証明が必要な場合がありますので、購入時の領収書を保管してください。ANNE KLEIN 認定のサービスステーションと場所の詳細については、上記のサービスセンターにお問い合わせください。

2年間の限定保証

この ANNE KLEIN の腕時計は、所有者であるお客様に対し、素材や製造上の欠陥に対して2年間保証されます。この保証は通常の消耗や乱用には適用されず、電池、ケース、ストラップ、クリスタル、ブレスレットは対象外です。この期間内にムーブメントに欠陥や故障が生じた場合は、当社の判断で修理または交換いたします。事故、誤用、怠慢など当社の管理外の理由により追加のサービスが必要になった場合、またはケース、クリスタル、ストラップ、ブレスレット、電池など保証対象外の部品の交換が必要になった場合は、適度な料金が発生しますが、追加料金は発生しません。上記の救済は排他的なものです。ANNE KLEIN は、付随的または結果的な損害については一切責任を負いません。時計のその他の部分の修理が必要な場合は、当社のサービスセンターをご利用いただき、迅速かつ安価な修理を受けてください。この保証により、お客様には特定の法的権利が付与されますが、国によって異なるその他の権利も付与される場合があります。

EU Representative: 24hour-AR
Van Nelleweg 1
3044 BC Rotterdam
The Netherlands
compliance@24hour-ar.com

UK Representative: 24hour-AR
15 Beaufort Court Admirals Way
Canary Wharf, London
United Kingdom E14 9XL
compliance@24hour-ar.com


※製品の改良のため、仕様は予告なく変更することがあり、モデルによつてデザインが異なる場合があります。





ANNE KLEIN

**WATCH INSTRUCTIONS &
2-YEAR LIMITED WARRANTY**

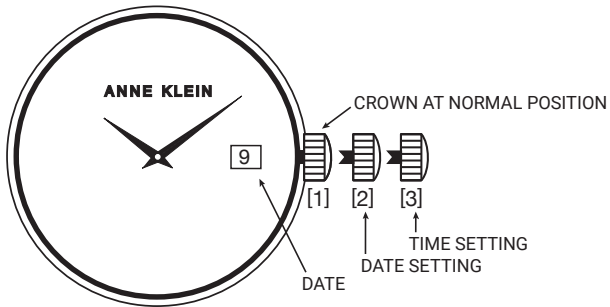

SETTING THE TIME

Pull out Crown all the way until it stops (position '3'). The second hand will stop. Rotate the Crown in either direction until desired time is obtained. Push Crown back in all the way (position '1') to re-engage time keeping. Second hand will begin to move.

NOTE: Never pull the Crown when the watch is wet.

SETTING THE TIME, DAY AND DATE

If your watch has a Date or a Day and Date Window, pull the Crown out to position '2' and turn the Crown in both directions until the Date showing is the day before the desired Date. Pull out Crown all the way (position '3') and turn the Crown to advance time. When midnight is reached, the Date will advance to the desired Date. Continue to turn the Crown until desired time is obtained. Push the Crown back in all the way until it stops (position '1') to re-engage time keeping.

WATER RESISTANCE

If your watch is water resistant, the watch is tested to be water resistant to 3-5 atmospheres (100-165 feet).

NOTE: Over time, the gaskets of the case may become worn and reduce the water resistance of the watch. A trained specialist should change the gaskets and the O-ring each time the battery is changed. To avoid any unwanted condensation, watches of all specifications (water resistant or not) should not be exposed to extreme temperatures such as cold or heat.

CHANGING THE BATTERY


Replace batteries when the watch becomes slow or does not operate, the readout darkens or does not appear or the backlight fails. Replace with same or equivalent.

NOTE: Battery change should be performed by a qualified technician who should also check the condition of the gaskets at the same time.


BATTERIES ARE NOT COVERED UNDER WARRANTY.

DIAGRAMS FOR ADJUSTABLE BRACELET WATCHES

1. CLASP EXTENDER

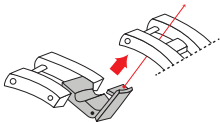


2. ONE SCREW SYSTEM

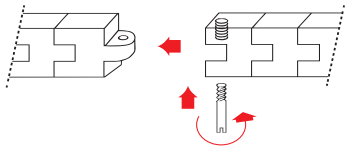


3. TWO SCREW SYSTEM

Screw in one at a time

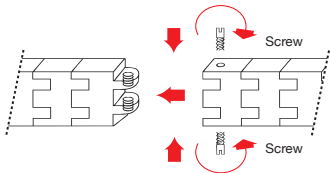


4. CONNECTION SYSTEM

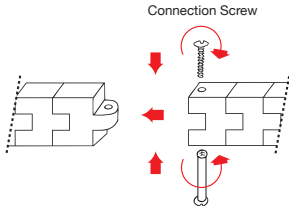


Use 2 screwdrivers. Hold one side steady before turning the screw.

5. METAL INSERT

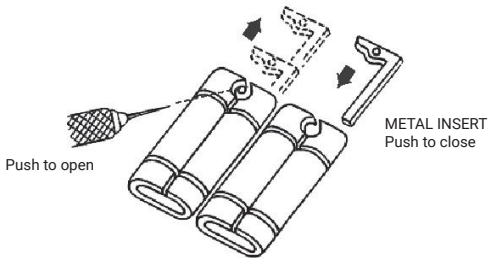

6. HAIRCLIP PIN

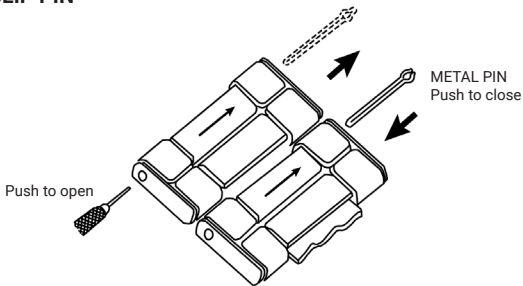

Turn over the watch to look for arrows on the underside of the links, showing you which way you need to push the pin out of the link. Use a pin remover tool to push out the "hair clip pin" from the hole located on the side of the link. After the links are removed, simply follow these steps in reverse to re-assemble the bracelet.


7. PIN & TUBE 1



Side view "B" of Link




Side view "A" of Link

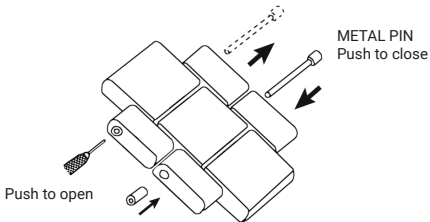



Check the side edge of the watch link, to determine which side of the link is "A" or "B". Take a pin remover tool and push out the pin from the hole located on side "B". After the desired links are removed, simply follow these steps in reverse to re-assemble the bracelet.

8. PIN & TUBE 2

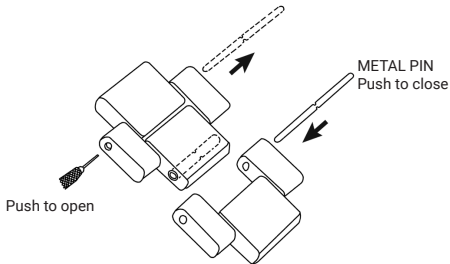


In order to adjust links for this watch construction, you must switch the pin on the tool kit to the longest pin (approximately 10mm long) found under the tool kit. Then use the pin remover tool to push out the pins from either side of the links. After the desired links are removed, simply follow these steps in reverse to re-assemble the bracelet.

9. SLIDING BAR

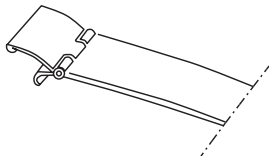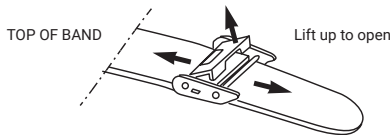


Slide along for adjustment
(Push down when done)

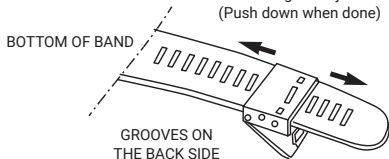


Align protruded line inside the sliding part with desired groove in band

10. FOLD-OVER BUCKLE


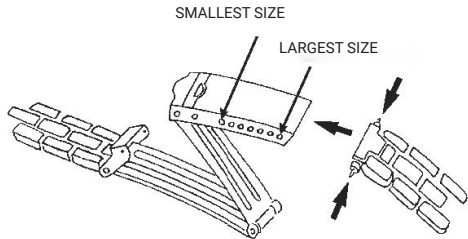


Compress the push pin, and put the ends into the suitable holes along the buckle.

11. MESH BAND ADJUSTMENT

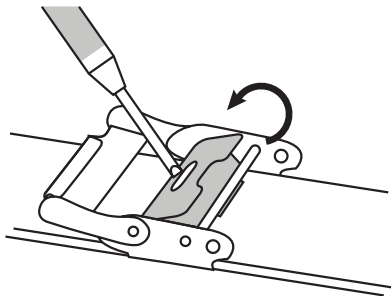

1. Place the tip of a small screwdriver or adjustment tool into the slot on the clasp. Gently exert pressure down on the screwdriver and pry the top portion on the clasp open.

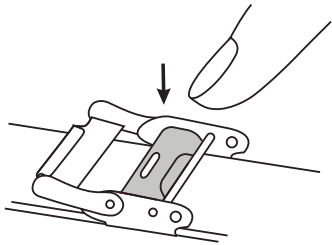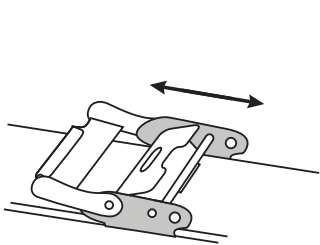

2. Slide the clasp up or down the mesh strap to adjust the band for the size of your wrist. When the proper fit for your wrist has been obtained, align the back of the clasp with the corresponding groove in the mesh watch strap.
3. Press the slotted clasp back down to securely close it.


1. TO UPDATE YOUR BOXSET:

CHANGING THE STRAPS

To remove the Strap, place the watch face down on a soft, flat surface. Slide the Strap Lever to the left and pull the Strap away from the watch.

TO INSERT THE NEW STRAP


Set Strap Pin into the Left Pin Groove. Slide the Strap Lever to the left. Align the Strap so the Right Pin “clicks” into the Right Pin Groove when the Lever is released.

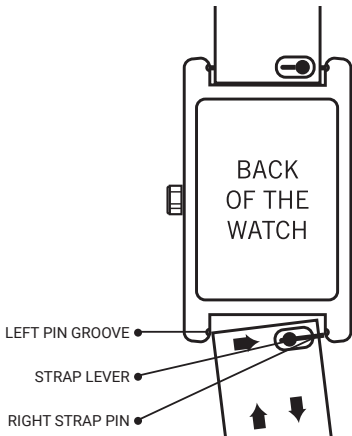

2. TO UPDATE YOUR BOXSET:

CHANGING THE BEZEL

To remove the Bezel, turn the Bezel counterclockwise until you can lift the Bezel from the watch. Place the new Bezel over the Watch Case and turn the Bezel clockwise until the Bezel is tight.

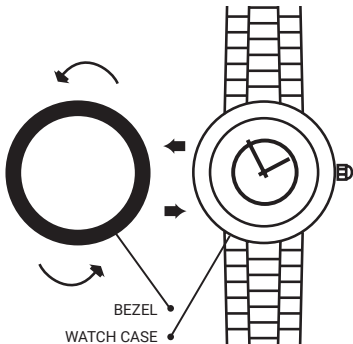


3. TO UPDATE YOUR BOXSET:

CHANGING THE BEZEL AND BRACELET

To remove the Bezel, turn the Bezel counterclockwise until you can lift the Bezel from the watch.

Hold the Watch upright and unhook the Bracelet. Hook on the new Bracelet.

Place the new Bezel over the Watch Case and turn the Bezel clockwise until the Bezel is tight.

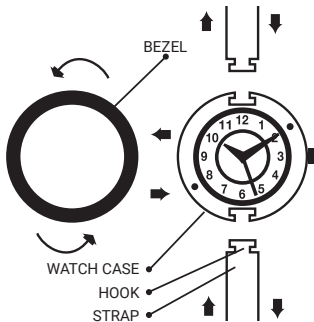

Dear Customer:

Help your watch/jewelry retailer protect our environment by properly recycling the button cell battery in your watch. Professional jewelers and watch retailers are best equipped to replace the battery in your watch without damage to the watch case and movement inside. They have the specialized tools and experience to do the job right. Inexperienced people can scar the case and damage the water resistant seal – voiding your warranty. It is important to recycle your watch battery in an environmentally safe way. Watch batteries contain very small amounts of mercury, which is required to prevent corrosion of the battery and damage to your watch. There is no danger to you or your watch from the mercury because it is in the sealed battery. But you need to recycle your watch battery properly. Your professional watch/jewelry retailer is the best person to do this for you. These professionals collect used batteries and recycle them through licensed waste management companies.

Do our environment and your watch a favor. Ask your watch/jewelry professional to replace your battery when it expires.

Requires (1) silver oxide (1.55 volt) battery included

TO RETURN YOU WATCH FOR SERVICING: RETURN IT TO ANNE KLEIN CO. OR TO AN AUTHORIZED SERVICE CENTER; IT SHOULD NOT BE RETURNED TO PLACE OF PURCHASE.

Carefully pack you watch in a sturdy box (do not send in a gift box for same will not be returned) and mail to:

ANNE KLEIN WATCHES

6015 Little Neck Parkway
Little Neck, NY 11362

ATTN: Service Dept.

Tel: +1 718 482-4195

Email: servicedept@egluck.com

Clarity Ltd.

Flat A- B, 12/F,
Sing Mei Industrial Building
29-37 Kwai Wing Road
Kwai Chung, N.T. Hong Kong

Tel: 852.2424.2211

Fax: 852.2424.2077

Email: service@egc-clarity.com

Because of possible loss, we recommend that you insure your watch, return receipt requested, when using the mail. If your watch requires cleaning, lubrication, battery changing, or needs a crystal replaced, ANNE KLEIN approved Service Centers may be available in your area. These repair facilities use ANNE KLEIN parts and components to assure quality and future performance. Free estimates are available in advance, should you need servicing or repairs not covered under the warranty. Repairs covered under the warranty may require proof of purchase, so retain the purchase receipt. For further information regarding ANNE KLEIN approved Service Stations and locations, please call the Service Centers listed above.

2 YEAR LIMITED WARRANTY

This Anne Klein Watch is warranted to you, the owner, for 2 years against all defects in material or workmanship. This warranty does not apply to normal wear and tear or abuse and excludes batteries, case, strap, crystal, or bracelet. In the event of a defect or malfunction of the movement within this period it will be repaired or replaced, at our option. No additional charge will be made unless additional servicing is necessary for reasons beyond our control such as accident, misuse, neglect or replacement of parts not warranted is required such as case, crystal, strap, bracelet or batteries in which event a moderate charge will be made.

The aforementioned remedy is exclusive. ANNE KLEIN shall not be liable for any incidental or consequential damages. Should any other part of your watch require repair, please use our Service Centers for quick and inexpensive repairs on your watch. This warranty gives you specific legal rights and you may also have other rights which may vary from country to country.

EU Representative: 24hour-AR
Van Nelleweg 1
3044 BC Rotterdam
The Netherlands
compliance@24hour-ar.com

UK Representative: 24hour-AR
15 Beaufort Court Admirals
Way Canary Wharf, London
United Kingdom E14 9XL
compliance@24hour-ar.com

* SPECIFICATIONS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE FOR PRODUCT
IMPROVEMENT, DESIGN MAY VARY DEPENDING ON THE MODEL.

